


THE NEW ZEALAND STORY

<u>SOLDER SIDE</u>		<u>PARTS SIDE</u>		<u>DIP SW A</u>								
				1	2	3	4	5	6	7	8	
GND	1	GND		TABLE TYPE	OFF							
GND	2	GND		UPRIGHT TYPE	ON							
+5V	3	+5V		SCREEN Normal		OFF	ALWAYS "OFF"					
+5V	4	+5V		Reverse		ON						
	5			NORMAL GAME			OFF					
+12V	6	+12V (+13V)		TEST MODE			ON					
POST	7	POST		PLAY CHARGE								
COIN COUNTER B	8	COIN COUNTER A		(COIN A) 1coin 1play				OFF	OFF			
COIN LOCKOUT B	9	COIN LOCKOUT A		1coin 2play				ON	OFF			
SPEAKER (-)	10	SPEAKER (+)		2coin 1play				OFF	ON			
	11			2coin 3play				ON	ON			
VIDEO GREEN	12	VIDEO RED		(COIN B) 1coin 1play						OFF	OFF	
VIDEO SYNC	13	VIDEO BLUE		1coin 2play						ON	OFF	
SERVICE SW	14	VIDEO GND		2coin 1play						OFF	ON	
TILT SW	15			2coin 3play						ON	ON	
(COIN B)	16	COIN A										
2P START	17	1P START		<u>DIP SW B</u>								
2P UP	18	1P UP			1	2	3	4	5	6	7	8
2P DOWN	19	1P DOWN		DIFFICULTY B	OFF	OFF						
2P LEFT	20	1P LEFT		Easy A	ON	OFF						
2P RIGHT	21	1P RIGHT		C	OFF	ON						
2P ATTACK BUTTON	22	1P ATTACK BUTTON		Difficult D	ON	ON						
2P JUMP BUTTON	23	1P JUMP BUTTON		EXTEND CHARGE								ALWAYS "OFF"
	24			70,000/Every 200,000			OFF	OFF				
	25			200,000/Every 300,000			ON	OFF				
	26			100,000/Every 250,000			OFF	ON				
GND	27	GND		50,000/Every 150,000			ON	ON				
GND	28	GND		NUMBER OF PLAYER	3				OFF	OFF		
					2				ON	OFF		
					5				OFF	ON		
					4				ON	ON		
				CONTINUE PLAY	Yes						OFF	
					No						ON	

2. ハーネスの接続 / HARNESS CONNECTION

2-1 端子Noのふり方 / TERMINAL NUMBERING

コネクター 1168-056-009 (KEL) 3.96 mm Pitch
CONNECTOR

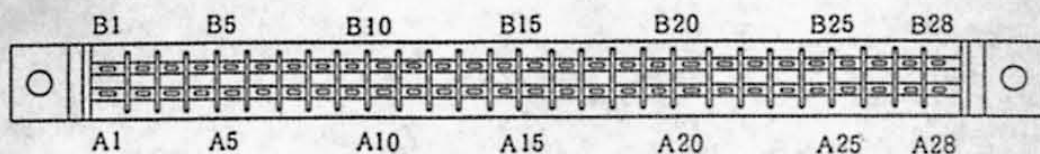

2-2 エッジコネクター端子の配列 / SIGNAL TO TERMINAL

半 田 面 SOLDER SIDE	端子番号 PIN #	部 品 面 PARTS SIDE
GND	B 1 A 1	GND
GND	B 2 A 2	GND
+5V	B 3 A 3	+5V
+5V	B 4 A 4	+5V
	B 5 A 5	
+12V	B 6 A 6	+12V
誤挿入防止キー MISTAKEN INPUT PREVENTION	B 7 A 7	誤挿入防止キー MISTAKEN INPUT PREVENTION
COIN COUNTER 2	B 8 A 8	COIN COUNTER 1
	B 9 A 9	
SPEAKER (-)	B10 A10	SPEAKER (+)
	B11 A11	
VIDEO GREEN	B12 A12	VIDEO RED
VIDEO SYNC	B13 A13	VIDEO BLUE
SERVICE SWITCH	B14 A14	
	B15 A15	
COIN SWITCH 2	B16 A16	COIN SWITCH 1
START SWITCH 2	B17 A17	START SWITCH 1
2P CONTROL 1 UP	B18 A18	1P CONTROL 1 UP
2P CONTROL 2 DOWN	B19 A19	1P CONTROL 2 DOWN
2P CONTROL 3 LEFT	B20 A20	1P CONTROL 3 LEFT
2P CONTROL 4 RIGHT	B21 A21	1P CONTROL 4 RIGHT
2P CONTROL 5 PUSH 1	B22 A22	1P CONTROL 5 PUSH 1
2P CONTROL 6 PUSH 2	B23 A23	1P CONTROL 6 PUSH 2
	B24 A24	
	B25 A25	
	B26 A26	
GND	B27 A27	GND
GND	B28 A28	GND

NEW ZEALAND STORY

DIP SW A

		1	2	3	4	5	6	7	8
TABLE UPRIGHT		<u>OFF</u> ON							
SCREEN REVERSE			<u>OFF</u> ON						
TEST				<u>OFF</u> ON					
					<u>OFF</u> ON				
COIN A	1 COIN-1PLAY 1 COIN-2PLAY 2 COIN-1PLAY 2 COIN-3PLAY					<u>OFF</u> ON <u>OFF</u> ON	OFF ON		
COIN B	1 COIN-1PLAY 1 COIN-2PLAY 2 COIN-1PLAY 2 COIN-3PLAY							<u>OFF</u> ON <u>OFF</u> ON	OFF ON

DIP SW B

		1	2	3	4	5	6	7	8
RANK (DIFFICULTY)	B A C D	<u>OFF</u> ON <u>OFF</u> ON	OFF ON						
BONUS	70000-200000 200000-300000 100000-250000 50000-150000			<u>OFF</u> ON <u>OFF</u> ON	OFF ON				
NUMBER OF PLAYER	3 2 5 4					<u>OFF</u> ON <u>OFF</u> ON	OFF ON		
COIN TYPE								<u>OFF</u> ON	
									<u>OFF</u> ON


The New Zealand Story

P. 2

NO. 2

CONNECTOR

SOLDER SIDE		COMPONENTS SIDE	
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V(+19V)
POST	H	7	POST
COIN COUNTER B	J	8	COIN COUNTER A
COIN LOCKOUT B	K	9	COIN LOCKOUT, A
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO G	N	12	VIDEO R
VIDEO SYNC	P	13	VIDEO B
SERVICE SW	R	14	VIDEO GND
TILT SW	S	15	
(COIN B)	T	16	COIN A
2P START	U	17	1P START
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P SHOOT	Z	22	1P SHOOT
2P MAGICAL POWER	a	23	1P MAGICAL POWER
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

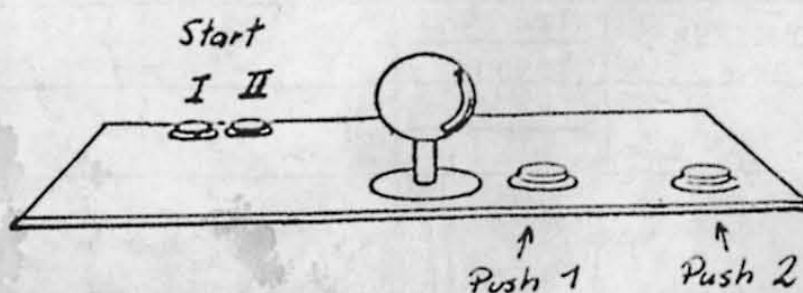

EXERCISE