

MODEL : P-47

=====

CONNECTOR DIAGRAM



G N D	1	A	G N D
G N D	2	B	G N D
HEADPHONE L.R. (-)	3	C	+ 5V
+ 5V	4	D	+ 5V
	5	E	
+12V	6	F	+12V
PROTECTION KEY	7	H	PROTECTION KEY
COIN COUNTER-1	8	J	COIN COUNTER-2
	9	K	
SPEARKE -1 (+)	10	L	SPEAKER-1 (-)
HEAD PHONE L(+)	11	M	
VIDEO RED	12	N	VIDEO GREEN
VIDEO BLUE	13	P	VIDEO SYNC
VIDEO GND	14	R	SERVICE SWITCH
	15	S	
COIN SWITCH 1	16	T	COIN SWITCH 2
START SWITCH 1	17	U	START SWITCH 2
1P UP	18	V	2P UP
1P DOWN	19	W	2P DOWN
1P LEFT	20	X	2P LEFT
1P RIGHT	21	Y	2P RIGHT
1P PUSH 1	22	Z	2P PUSH 1
1P PUSH 2	23	a	2P PUSH 2
	24	b	
	25	c	
	26	d	
G N D	27	e	G N D
G N D	28	f	G N D

SPEAKER -2(+)	1	2	SPEAKER -2(-)
HEADPHONE R(+)			



PARTS SIDE	SOLDER SIDE
GND	1 GND
GND, HEAD PHONE L&R (-)	2 GND
+5V	3 +5V
+5V	4 +5V
	5
+12V	6 +12V
MISTAKEN INPUT PREVENTION	7 MISTAKEN INPUT PREVENTION
COIN COUNTER 1	8 COIN COUNTER 2
	9
SPEAKER 1 (+), HEAD PHONE L (+)	10 SPEAKER 1 (-)
	11
VIDEO RED	12 VIDEO GREEN
VIDEO BLUE	13 VIDEO SYNC
VIDEO GND	14
	15
COIN SWITCH 1	16 COIN SWITCH 2
START SWITCH 1	17 START SWITCH 2
1P UP	18 2P UP
1P DOWN	19 2P DOWN
1P LEFT	20 2P LEFT
1P RIGHT	21 2P RIGHT
1P PUSH 1	22 2P PUSH 1
1P PUSH 2	23 2P PUSH 2
	24
	25
	26
GND	27 GND
GND	28 GND

SPEAKER 2 (+), HEAD PHONE R (+) 1 2 SPEAKER 2 (-)

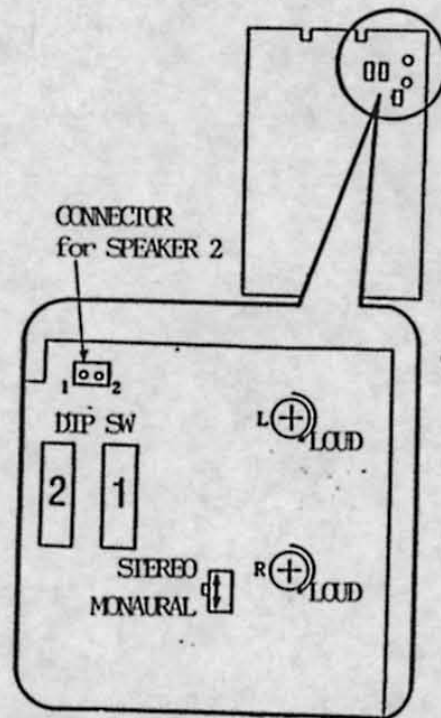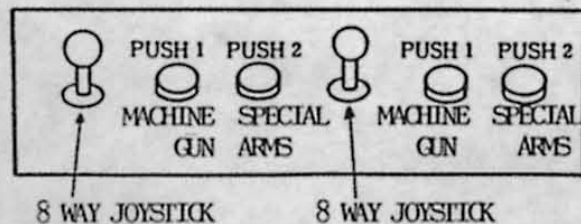

RE: VOLUME  
Please use HEAD PHONE L,  
when MONAURAL.

DIP SW 1	1	2	3	4	5	6	7	8
COIN SHOOTER 1								
1coin 1play	OFF	OFF	OFF					
1coin 2play	ON	OFF	OFF					
1coin 3play	OFF	ON	OFF					
1coin 4play	ON	ON	OFF					
2coin 1play	OFF	OFF	ON					
3coin 1play	ON	OFF	ON					
4coin 1play	OFF	ON	ON					
Free Game	ON	ON	ON					
COIN SHOOTER 2								
1coin 1play				OFF	OFF	OFF		
1coin 2play				ON	OFF	OFF		
1coin 3play				OFF	ON	OFF		
1coin 4play				ON	ON	OFF		
2coin 1play				OFF	OFF	ON		
3coin 1play				ON	OFF	ON		
4coin 1play				OFF	ON	ON		
Free Game				ON	ON	ON		
DEMO SOUND	Yes							OFF
	No							ON
PLAYER	Death Mode							OFF
	No Death Mode							ON
DIP SW 2								
NUMBER	3	OFF	OFF					
OF PLAYER	2	ON	OFF					
	4	OFF	ON					
	5	ON	ON					
DIFFICULTY	Normal							
	Difficult							
	Very Difficult							
	Easy							
MONITOR REVERSE	Normal							OFF
	Reverse							ON

DIP SW 2	1	2	3	4	5	6	7	8
NUMBER	3	OFF	OFF					
OF PLAYER	2	ON	OFF					
	4	OFF	ON					
	5	ON	ON					
DIFFICULTY	Normal							
	Difficult							
	Very Difficult							
	Easy							
MONITOR REVERSE	Normal							OFF
	Reverse							ON