

PANIC ROAD

Monitor V 2

3 Taste

D2

SOLDER SIDE	NO	COMPONENT SIDE
GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
-5V	5	-5V
+12V	6	+12V
	7	
COIN COUNTER	2	8
	9	
SPEAKER (-)	10	SPEAKER (+)
	11	
VIDEO GREEN	12	VIDEO RED
VIDEO SYNC	13	VIDEO BLUE
	14	VIDEO GND
	15	
COIN SWITCH	2	16
START SWITCH	2	17
2P LEFT FLIPPER Taste A	18	1P LEFT FLIPPER Taste A
2P RIGHT FLIPPER Taste B	19	1P RIGHT FLIPPER Taste B
2P LEFT SHAKE ant Hebel	20	1P LEFT SHAKE ant Hebel
2P RIGHT SHAKE	21	1P RIGHT SHAKE
	22	
	23	
	24	
	25	
	26	
GND	27	GND
GND	28	GND

Oben
1 28

DIPSW 1	1	2	3	4	5	6	7	8
COIN1	1/1	OFF	OFF	OFF				
	2/1	ON	OFF	OFF				
COIN/CREDIT	1/3	OFF	ON	OFF				
	4/1	ON	ON	OFF				
	1/2	OFF	OFF	ON				
	3/1	ON	OFF	ON				
	1/5	OFF	ON	ON				
5/1	ON	ON	ON					
COIN2	1/1				OFF	OFF		
	2/1				ON	OFF		
COIN/CREDIT	1/2				OFF	ON		
	2/3				ON	ON		
TEST MODE	NORMAL						OFF	
	TEST						ON	
CONTINUE GAME							OFF	
							ON	
出荷時の設定	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF

←FACTORY SETTING

DIPSW 2	1	2	3	4	5	6	7	8
DEMO SOUND	OFF	OFF						
	ON	ON						
DIFFICULTY LEVEL 難易度 ※	A		OFF	OFF				
	B		ON	OFF				
	C		OFF	ON				
	D		ON	ON				
ボーナス得点 BONUS POINTS 1回目/ 2回目以降 (*10000)	5/10				OFF	OFF		
	10/20				ON	OFF		
	20/40				OFF	ON		
	50/100				ON	ON		
NUMBER OF BALL ボール数	1						OFF	OFF
	2						ON	OFF
	3						OFF	ON
	4						ON	ON
GAME STYLE	UPLIGHT							OFF
	?							ON
出荷時の設定	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF

←FACTORY SETTING