

ペンギン戦争

調整箇所&調整方法


PENGUIN-KUN WARS

GAME ADJUSTMENT INSTRUCTION

	1	2	3	4	5	6	7	8
1 COIN 1 PLAY	OFF	OFF						
1 COIN 2 PLAY	OFF	ON						
2 COIN 1 PLAY	ON	OFF						
3 COIN 1 PLAY	ON	ON						
TABLE TYPE			OFF					
UP RIGHT TYPE			ON					
DEMO SOUND ON				OFF				
DEMO SOUND OFF				ON				
DIFFICULTY 2					OFF	OFF		
1					OFF	ON		
3					ON	OFF		
4					ON	ON		
FLIP UP							OFF	
FLIP DOWN							ON	
FREE PLAY OFF								OFF
FREE PLAY ON								ON

配線接続図

WIRING INSTRUCTION

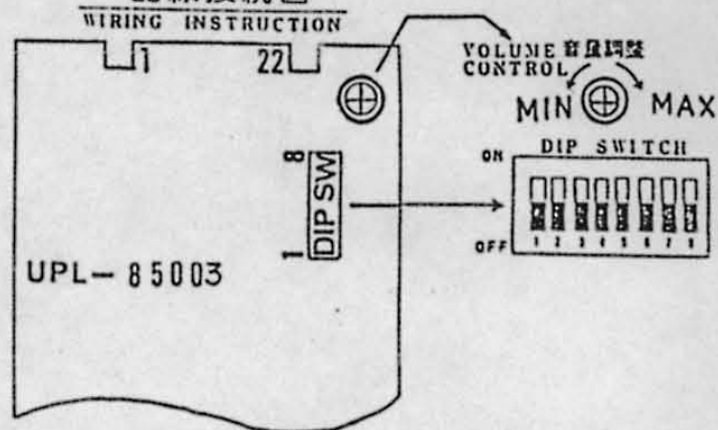

P.C. BOARD

部品面

パターン面

PARTS SIDE			SOLDER SIDE		
GND	A	1	GND		
GND	B	2	GND		
GND	C	3	GND		
5V	D	4	5V		
5V	E	5	5V		
12V	F	6	12V		
SOUND OUT +	H	7	SOUND OUT +		
SOUND OUT -	J	8	SOUND OUT -		
	K	9	COIN PULSE		
SELECT 1P	L	10	SELECT 2P		
	M	11			
	N	12			
SW 1P	P	13	SW 2P		
RIGHT 1P	R	14	RIGHT 2P		
LEFT 1P	S	15	LEFT 2P		
	T	16			
	U	17			
	V	18			
VIDEO GND	W	19	VIDEO GND		
TV R	X	20	TV B		
TV G	Y	21	TV SYNC		
GND	Z	22	GND		