

PUYOPUYO (834-9029-01)


COIN/CREDIT OPTION SWITCH SETTING DIP SW 1

OPTION	1	2	3	4	5	6	7	8
1 COIN 1 CREDIT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN 2 CREDITS	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
1 COIN 3 CREDITS	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
1 COIN 4 CREDITS	ON	ON	OFF	OFF	ON	ON	OFF	OFF
1 COIN 5 CREDITS	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
1 COIN 6 CREDITS	ON	OFF	ON	OFF	ON	OFF	ON	OFF
2 COINS 1 CREDIT	OFF	ON	ON	OFF	OFF	ON	ON	OFF
3 COINS 1 CREDIT	ON	ON	ON	OFF	ON	ON	ON	OFF
4 COINS 1 CREDIT	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
2 COINS 3 CREDITS	ON	OFF	OFF	ON	ON	OFF	OFF	ON
2 COINS 1 CREDIT	OFF	ON	OFF	ON	OFF	ON	OFF	ON
4 COINS 2 CREDITS	ON	ON	OFF	ON	ON	ON	OFF	ON
5 COINS 3 CREDITS	ON	ON	OFF	ON	ON	ON	OFF	ON
6 COINS 4 CREDITS	ON	ON	OFF	ON	ON	ON	OFF	ON
1 COIN 1 CREDIT	OFF	OFF	ON	ON	OFF	OFF	ON	ON
2 COINS 2 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
3 COINS 3 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
4 COINS 4 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
5 COINS 5 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
1 COIN 1 CREDIT	OFF	ON	ON	ON	OFF	ON	ON	ON
2 COINS 3 CREDITS	ON	ON	ON	ON	ON	ON	ON	ON
FREE PLAY	ON	ON	ON	ON	ON	ON	ON	ON
	COIN SW #1				COIN SW #2			

OPTION SWITCH SETTING DIP SW 2

OPTION	1	2	3	4	5	6	7	8
NOT USED	OFF							
ADVERTISE SOUND	OFF	OFF						
	ON	ON						
※1 VS MODE	1 GAME MATCH		OFF					
MATCH/CREDIT	3 GAMES MATCH		ON					
※2 GAME DIFFICULTY	NORMAL			OFF	OFF			
	EASY			ON	OFF			
	HARD			OFF	ON			
	HARDEST			ON	ON			
NOT USED						OFF		
NOT USED							OFF	
※3 MOVING SEAT	NO USE							OFF
	USE							ON

C2 BOARD

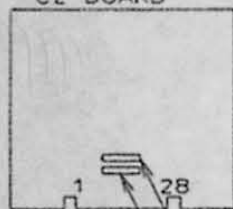

MONITOR
HORIZONTAL

BARE BD NO. 171-5992A
DIP SW 1
DIP SW 2

※Note1:

Refers to the setting of the number of games per credit in the Vs.mode.

※Note2:

Refers to the setting of the difficulty levels in the 1P mode.

※Note3:

By means of DIP SW "ON" and "OFF", a port change is partially mode.

Only in the case where the BD is mounted on the SEGA's cabinet MEGALO 50, turn DIP SW No.8 "ON".

At this time, "9" and "K" are used as the port for the BODY moving signal.

PIN ASSIGNMENT (JAMMA)

COMPONENT SIDE		SOLDER SIDE
GND	1A	GND
GND	2B	GND
+5V	3C	+5V
+5V	4D	+5V
(NOT USED)	5E	(NOT USED)
+12V	6F	+12V
KEY (NOT USED)	7H	KEY (NOT USED)
COIN METER 1	8J	COIN METER 2
(NOT USED)	9K	(NOT USED)
SPEAKER (+)	10L	SPEAKER (-)
(NOT USED)	11M	(NOT USED)
RED	12N	GREEN
BLUE	13P	SYNC
GND (SYNC)	14R	SERVICE
TEST	15S	(NOT USED)
COIN 1	16T	COIN 2
1P START	17U	2P START
1P UP	18V	2P UP
1P DOWN	19W	2P DOWN
1P LEFT	20X	2P LEFT
1P RIGHT	21Y	2P RIGHT
1P BUTTON	22Z	2P BUTTON
(NOT USED)	23a	(NOT USED)
(NOT USED)	24b	(NOT USED)
(NOT USED)	25c	(NOT USED)
(NOT USED)	26d	(NOT USED)
GND	27e	GND
GND	28f	GND

56P P=3.96mm

JOYSTICK CONTROL DIRECTIONS

