


PUZZLE ACTION (TNT-R)

COIN CREDIT OPTION SWITCH SETING		DIP SW 1							
OPTION		1	2	3	4	5	6	7	8
1 COIN	1 CREDIT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN	2 CREDITS	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
1 COIN	3 CREDITS	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
1 COIN	4 CREDITS	ON	ON	OFF	OFF	ON	ON	OFF	OFF
1 COIN	5 CREDITS	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
1 COIN	6 CREDITS	ON	OFF	ON	OFF	ON	OFF	ON	OFF
2 COINS	1 CREDIT	OFF	ON	ON	OFF	OFF	ON	ON	OFF
3 COINS	1 CREDIT	ON	ON	ON	OFF	ON	ON	ON	OFF
4 COINS	1 CREDIT	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
2 COINS	3 CREDITS	ON	OFF	OFF	ON	ON	OFF	OFF	ON
2 COINS	1 CREDIT								
4 COINS	2 CREDITS	OFF	ON	OFF	ON	OFF	ON	OFF	ON
5 COINS	3 CREDITS								
6 COINS	4 CREDITS								
2 COINS	1 CREDIT	ON	ON	OFF	ON	ON	ON	OFF	ON
4 COINS	3 CREDITS								
1 COIN	1 CREDIT								
2 COINS	2 CREDITS								
3 COINS	3 CREDITS	OFF	OFF	ON	ON	OFF	OFF	ON	ON
4 COINS	4 CREDITS								
5 COINS	6 CREDITS								
1 COIN	1 CREDIT								
2 COINS	2 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
3 COINS	3 CREDITS								
4 COINS	5 CREDITS								
1 COIN	1 CREDIT	OFF	ON	ON	ON	OFF	ON	ON	ON
2 COINS	3 CREDITS								
	FREE PLAY	ON	ON	ON	ON	ON	ON	ON	ON
		COIN SW. 1				COIN SW. 2			

C2 BOARD

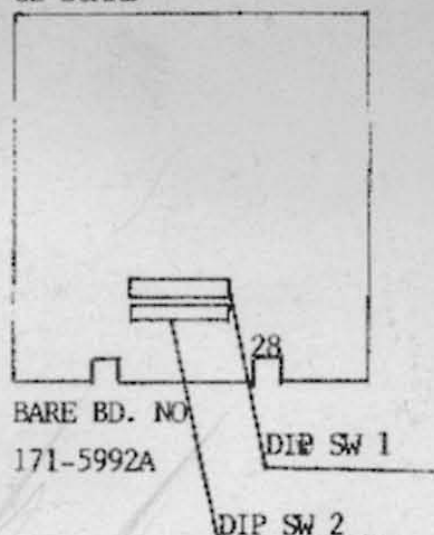

OPTION SWITCH SETING

OPTION		DIP SW 2							
OPTION		1	2	3	4	5	6	7	8
ADVERTISE SOUND	OFF	OFF							
	ON	ON							
GAME DIFFICULTY	NORMAL		OFF	OFF					
	EASY		ON	OFF					
	HARD		OFF	ON					
	HARDEST		ON	ON					
NOT USED (ALL OFF)									

ASSEMBLY INSTRUCTIONS

(TNT - R)

*Puzzle
Action*

COMPONENT SIDE		SOLDER SIDE
GND	1 A	GND
GND	2 B	GND
+5V	3 C	+5V
+5V	4 D	+5V
(NOT USED)	5 E	(NOT USED)
+12V	6 F	+12V
KEY (NOT USED)	7 H	KEY (NOT USED)
COIN METER 1	8 J	COIN METER 2
(NOT USED)	9 K	(NOT USED)
SPEAKER (+)	10 L	SPEAKER (-)
(NOT USED)	11 M	(NOT USED)
RED	12 N	GREEN
BLUE	13 P	SYNC
GND (SYNC)	14 R	SERVICE
TEST	15 S	(NOT USED)
COIN 1	16 T	COIN 2
1P START	17 U	2P START
1P UP	18 V	2P UP
1P DOWN	19 W	2P DOWN
1P LEFT	20 X	2P LEFT
1P RIGHT	21 Y	2P RIGHT
1P SELECT	22 Z	2P SELECT
(NOT USED)	23 a	(NOT USED)
(NOT USED)	24 b	(NOT USED)
(NOT USED)	25 c	(NOT USED)
(NOT USED)	26 d	(NOT USED)
GND	27 e	GND
GND	28 f	GND

JOYSTICK CONTROL DIRECTIONS

1P START ○

○ 2P START



SELECT



SELECT

1P SIDE

2P SIDE