

PUZZLE BREAK

DIP SW 1

SETTING	POSITION	1	2	3	4	5	6	7	8	
DEMO SOUND	*SOUND OFF	OFF								
	SOUND ON	ON								
COIN/PLAY	*1COIN 1CREDIT		OFF	OFF	OFF					
	1COIN 2CREDIT		ON	OFF	OFF					
	2COIN 3CREDIT		OFF	ON	OFF					
	1COIN 3CREDIT		ON	ON	OFF					
	2COIN 1CREDIT		OFF	OFF	ON					
	3COIN 1CREDIT		ON	OFF	ON					
	4COIN 1CREDIT		OFF	ON	ON					
	5COIN 1CREDIT		ON	ON	ON					
GAME DIFFICULTY	*LEVEL 4					OFF	OFF	OFF		
	LEVEL 5					ON	OFF	OFF		
	LEVEL 6					OFF	ON	OFF		
	LEVEL 7					ON	ON	OFF		
	LEVEL 8					OFF	OFF	ON		
	LEVEL 1					ON	OFF	ON		
	LEVEL 2					OFF	ON	ON		
	LEVEL 3					ON	ON	ON		
TEST MODE	*GAME MODE								OFF	
	TEST MODE								ON	