


# *Rim Rockin'* **BASKETBALL**

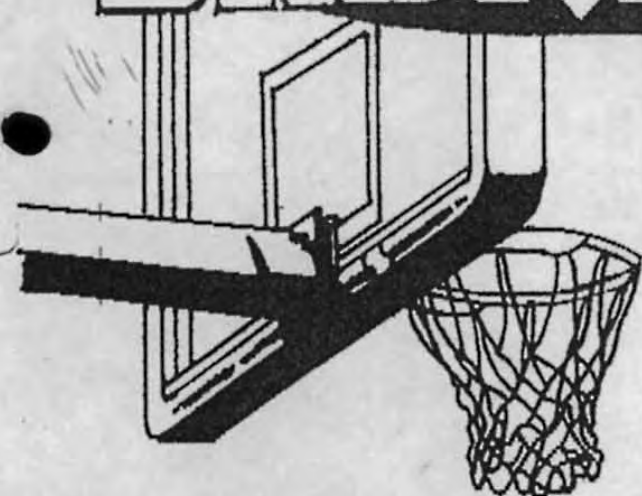

INSTALLATION MANUAL

# SETTINGS, AUDITS, & DIAGNOSTICS

## SETTING THE DIP SWITCH

The DIP switch is located underneath the top PC board. You must remove the top PC board to adjust the DIP switch.

The default settings are: negative sync; COIN MODE 1; and 4-player cabinet.

To remove the top PCB, just pinch the top of the plastic standoff so the lever is straight, and pull the corner of the top PCB up. There are four plastic standoffs. When replacing the top PCB be careful to line up the pins on the back of the top PCB. With the connector on the main PCB, push the top PCB down until the plastic standoffs snap into place. (See Illustration 4 on page 16.)

Position 1 (OFF): negative video sync;

Position 1 (ON): positive video sync

Position 2 (OFF): COIN MODE 1-Individual coin slots for each player

Position 2 (ON): COIN MODE 2-common coin slots for all players

Position 3 (OFF): sets a ONE-player cabinet

Position 4 (OFF):

Position 3 (ON): sets a TWO-player cabinet

Position 4 (OFF):

Position 3 (OFF): sets a THREE-player cabinet

Position 4 (ON):

Position 3 (ON): sets a FOUR-player cabinet

Position 4 (ON):

