

Rush Crush

RUSH CRUSH

GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
-5V	5	-5V
+12V	6	+12V
COIN COUNTER 2	7	COIN COUNTER 1
COIN LOCK CUT 2	8	COIN LOCK OUT 1
SF(-)	9	SF(+)
SYNC	10	SYNC
VIDEO GREEN	11	VIDEO RED
VIDEO SYNC	12	VIDEO BLUE
SERVICE SW	13	VIDEO GND
TILT SW	14	TEST SW
COIN SW 2	15	COIN SW 1
START SW 2	16	START SW 1
2F CONTROL 1UP	17	1F CONTROL 1UP
2F CONTROL 2DOWN	18	1F CONTROL 2DOWN
2F CONTROL 3LEFT	19	1F CONTROL 3LEFT
2F CONTROL 4 RIGHT	20	1F CONTROL 4RIGHT
2F CONTROL 5PUSH 1	21	1F CONTROL 5PUSH1
2F CONTROL 6PUSH 2	22	1F CONTROL 6PUSH2
2F CONTROL 7PUSH 3	23	1F CONTROL 7PUSH3
SYNC	24	SYNC
SYNC	25	SYNC
GND	26	GND
GND	27	GND
	28	

