

©1988-1993 Activision, Inc. Shanghai™ is a trademark of Activision, Inc. Source code for Video Arcade System designed by Sun Electronics Corp. ©1993 SUNSOFT

10.



Sun Electronics Corporation

## ●設置の概要 (SETUP OVERVIEW)

## OJAMMA規格(JAMMA STANDARD)

	OOAMINIA SEIB (OVIII			S. / L.
○基板コネクタ	半田面(SOLDER SIDE)			部品面(PARTS SIDE)
EDGE CONNECTOR	GND	A	1	GND
・JAMMA規格、準拠	GND	в	2	GND
JAMMA STANDARD COMPATIBLE	+5V	c	3	+5V
	+5V	D	4	+5V
OCRTモニタ	N.C.	E	5	N.C.
CRT	+12V	F	6	+12V
<ul> <li>・ヨコ画面</li> </ul>	調挿入防止キー(SAFETY KEY)	H	7	凯柳入防止キー(SAFETY KEY
HORIZONTAL DISPLAY	COIN COUNTER 2	J	8	COIN COUNTER 1
HORIZON THE DIGT LITT	N.C.	K	9	N.C.
つコントロールパネルの配置	SPEAKER(-)	L	10	SPEAKER(+)
CONTROL PANEL CONFIGURATION	N.C.	М	11	N.C.
HEALAND A LINE OF LAND	VIDEO GREEN	N	12	VIDEO RED
・ 横並び2人同時プレイ型 SIMULTANEOUS GAME PLAY	VIDEO SYNC	Р	13	VIDEO BLUE
SIMULTANEOUS GAME TEAT	SERVICE SW	R	14	VIDEO GND
	N.C.	S	15	TEST SW
8方向 ジョイステイック	COIN SW2	т	16	COIN SW1
	START SW2	U	17	START SW1
() 選択/決定 キャンセル	2P UP	v	18	1P UP
Y - O	2P DOWN	w	19	1P DOWN
BUTTONI BUTTONZ	2P LEFT	x	20	1P LEFT
8WAY BUTTONI BUTTONZ JOYSTICK SELECT/ CANCEL .	2P RIGHT	Y	21	1P RIGHT
CONFIRM	2P BUTTON1	Z	22	1P BUTTON1
	2P BUTTON2	a	23	1P BUTTON2
○DIP SWの位置	N.C.	b	24	N.C.
DIP SWITCH LOCATION	N.C.	c	25	N.C.
	N.C.	d	26	N.C.
JAMMA	GND	e	27	GND
	GND	f	28	GND
	A state of the state of the		1	and with the second large large
SOUND VOLUME				per ten scholder, he
				An descendance of all "compare situated reds" and share new
		_		TWORNDY 008
le l	u cinin		62	
DIP SWITCH I	Man and Ser Joseph "	-35.	2	

Sun Electronics Corporation

## ODIP SWITCH1 SETTINGS

項 目 ITEM	内 容 DESCRIPTION	1	2	3	4	5	6	7	8
	1COIN 1CREDIT	OFF	OFF	OFF					
	1COIN 2CREDIT	OFF	OFF	ON					-
コイン1の	1COIN 3CREDIT	OFF	ON	OFF					
設 COIN	1COIN 4CREDIT	OFF	ON	ON					
COIN SWITCH1	2COIN 1CREDIT	ON	OFF	OFF					
SETTINGS	3COIN 1CREDIT	ON	OFF	ON					
	4COIN 1CREDIT	ON	ON	OFF					
	5COIN 1CREDIT	ON	ON	ON					
	1COIN 1CREDIT				OFF	OFF	OFF		
	1COIN 2CREDIT				OFF	OFF	ON		
コイン2の	1COIN 3CREDIT		1		OFF	ON	OFF		
設定	1COIN 4CREDIT				OFF	ON	ON		
COIN SWITCH2 SETTINGS	2COIN 1CREDIT				ON	OFF	OFF		
	3COIN 1CREDIT				ON	OFF	ON		
	4COIN 1CREDIT				ON	ON	OFF		
	5COIN 1CREDIT	1			ON	ON	ON		
出荷時の初期設	定 FACTORY SETTINGS	OFF							

## OIP SWITCH2 SETTINGS

2837-80104

項 目 ITEM	内 容 DESCRIPTION	1	2	3	4	5	6	7	8
	NORMAL	OFF	OFF						
難易度	EASY	OFF	ON						
DIFFICULTY	DIFFICULT	ON	OFF						
	VERY DIFFICULT	ON	ON	1. 11					
	80sec			OFF	OFF				
基本時間 BASE TIME	70sec		1	OFF	ON	1-12			
	90sec			ON	OFF	9 - R.L.			
	100sec	ha de de	. There	ON	ON	-			
	5sec	1.7.2	87.L.	111	ALC: N	OFF	OFF		
加算時間	4sec	peltant	Corro	a deserv	r Elect	OFF	ON	-	
ADDITIONAL TIME	6sec					ON	OFF		
TIME	7sec					ON	ON		
デモサウンド DEMOSOUND	SOUND OFF							OFF	
	SOUND ON							ON	
画面設定	ノーマル NORMAL								OFF
SCRREN	反 転 REVERSE								ON
出荷時の初期認	定 FACTORY SETTINGS	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

BOIP SWITCHIS SETTINGS

H IN Mari	PI W DESCRIPTION	1							
	ICOIN ICREDIT	196-							
	LCOIN 2CREDIT								
10/2/2	ICOIN SCREDIT			OFF					
S SI	ROUN (CREDIT	340							
COIN	SCOIN ICREDIT		730	OFF					
SETTINGS	3COIN ICREDIT	140	THO	NO					
	ACOIN ICREDIT	ON		OFF					
	SCOIN ICREDIT								
	ICOIN ICREDIT				210	OFF	OFF		
					190		MO		
168510	ICOIN SCREDIT					MO	OFF		
	LCOIN ACREDIT				OFF	160	MO		
COIN SWITCHER									
SETTINGS	JOOTS ICREED					OFF			
						10			
	SCORV LORGERT				-20		MO		
	E FACTORY SET FLATS			6)747	ar ten			GRP	190

ODIP SWITCHS SETTINGS

			1.2			i.	H W LHSCRIPTION	E Here METT
					OPEN			
					120		YAAY	
					OFF		DIFFICULT	TUSER
					10-		VERY DIFFICULT	
*								
		-		1.6			7054c	
			<b>U</b> N		0			BASH TIME
			/26	7 14		1++	100sec	
		<b>L V</b>	电	1-11	TT	541	5860	merchanne al
	NO	S Su	n Elec	tronics	Corpo	oration	ised in	· 加速時間 ·
	0FF	ON			-			TIME
		NO						
							SOUND OFF	ホモウリード
							SOUND ON	
							1-76 NORMAL	
							R. REVERSE	SCREEN
OFF			OFF	OFF	OFF		E PACTORY SETTENCES	

2\$3J-\$0104