

Steckerbelegung S H O T - R I D E R

auf

Travers USA - Zippy RaceBestückungsseite

GND	1
GND	2
	3
Coin Counter A	4
1 Pl. Left	5
1 Pl. Right	6
1 Pl. Brake	7
2 Pl. Start	8
	9
Coin B	10
+ 12 Volt	11
+ 12 Volt	12
Speaker (-)	13
1 Pl. Accelerator	14
TV Red	15
TV Blue	16
2 Pl. Right	17
2 Pl. Accelerator	18
Service SW	19
+ 5 Volt	20
+ 5 Volt	21
GND	22

Lötseite

GND
GND
Coin Counter B
1 Pl. Start
TV Sync
+ 12 Volt
+ 12 Volt
Speaker (+)
TV Green
2. Pl. Left
2 Pl. Brake
Coin A
+ 5 Volt
+ 5 Volt
GND

Dip Switch 2

1	2	3	4	5	6	7	8	
off								Normal Screen
on								Screen Reserve
			off					Stand
			on					Tisch

Im Standgerät entsprechende Anschlüsse von Pl. 1 und Pl. 2 verbinden.