

\*\*\* SIDE POCKET \*\*\*

\* DIP SWITCH OPTION.

DIP SWITCH. 1					
NO.	SETTING				REMARKS
1	OFF	ON	OFF	ON	GAME CHARGE
2	OFF	OFF	ON	ON	TABLE
	1 COIN 1 PLAY	1 2	1 3	2 1	UP RIGHT SELECTOR
3	OFF	ON	OFF	ON	GAME CHARGE
4	OFF	OFF	ON	ON	UP RIGHT
	1 COIN 1 PLAY	1 2	1 3	2 1	LEFT SELECTOR
5	OFF				STAY OFF
6	OFF				STAY OFF
7	OFF		ON		AVIDEO BED
	YES		NO		ATTRACT DEMO SOUND
8	OFF				

DIP SWITCH. 2					
NO.	SETTING				REMARKS
1	OFF	ON	OFF	ON	TIMER FOR SPEED REDUCTION
2	OFF	OFF	ON	ON	
	NORMAL	BIT FAST	FAST	NO REDUCE	
3	OFF	ON	OFF	ON	HOLDING BALL NBR
4	OFF	OFF	ON	ON	
	6 EA	3 EA	9 EA	∞	
5	OFF	ON	OFF	ON	INCREASE BALL NBR.
6	OFF	OFF	ON	ON	
	10,000 AFTER EACH	20,000 AFTER EACH	30,000 AFTER EACH	20,000	
	50,000	70,000	100,000		
7	OFF				STAY OFF
8	OFF				STAY OFF


CONNECTOR CB3E-2EDV-388E (HYS) 388E B13CP  
1188-028-008 (KEG) 388E B13CP

3-1 METHOD OF LEVING NUMBER

# H A R N E S S      C O N N E C T I O N

## 2-1. METHOD OF TERMINAL NUMBER

CONNECTOR      1168-056-009 (KEL) 3.96 mm Pitch  
 CR7E-56DA-3.96E (HRS) 3.96 mm Pitch

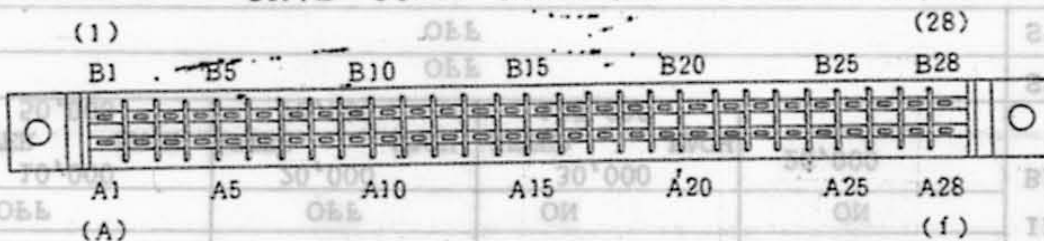

## 2-2. ARRANGEMENT OF EDGE CONNECTOR

SOLDER SIDE	PIN	PARTS SIDE
GND	A 1	GND
GND	B 2	GND
+5V	C 3	+5V
+5V	D 4	+5V
	E 5	
+12V	F 6	+12V
MISTAKEN INPUT PREVENTION	H 7	MISTAKEN INPUT PREVENTION
COIN COUNTER 2	J 8	COIN COUNTER 1
	K 9	
SPEAKER (-)	L 10	SPEAKER (+)
	M 11	
VIDEO GREEN	N 12	VIDEO RED
VIDEO SYNC	P 13	VIDEO BLUE
SERVICE SWITCH	R 14	VIDEO GND
	S 15	
COIN SWITCH 2	T 16	COIN SWITCH 1
START SWITCH 2	U 17	START SWITCH 1
2P CONTROL 1 UP	V 18	1P CONTROL 1 UP
2P CONTROL 2 DOWN	W 19	1P CONTROL 2 DOWN
2P CONTROL 3 LEFT	X 20	1P CONTROL 3 LEFT
2P CONTROL 4 RIGHT	Y 21	1P CONTROL 4 RIGHT
2P CONTROL 5 PUSH	Z 22	1P CONTROL 5 PUSH 1
2P CONTROL 6 PUSH	a 23	1P CONTROL 6 PUSH 2
	b 24	
	c 25	
	d 26	
GND	e 27	GND
GND	f 28	GND