

SILENT DRAGON

《OVERSEA VERSION》

【SETTING OF DIP SWITCH A】

| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|--|-------------|-----|-----|-----|-----|-----|-----|---|-----|
| NOT USED | | OFF | | | | | | | |
| SCREEN ROTATION | NORMAL | | OFF | | | | | | |
| | REVERSE | | ON | | | | | | |
| TEST MODE | NORMAL | | | OFF | | | | | |
| | TEST | | | ON | | | | | |
| ATTRACT SOUND | WITH | | | | OFF | | | | |
| | WITHOUT | | | | ON | | | | |
| PLAY PRICING (COIN A COIN B) (COIN C COIN D) | 1COIN 1PLAY | | | | | OFF | OFF | | |
| | 2COIN 1PLAY | | | | | ON | OFF | | |
| | 3COIN 1PLAY | | | | | OFF | ON | | |
| | 4COIN 1PLAY | | | | | ON | ON | | |
| NOT USED | | | | | | | OFF | | |
| | | | | | | | | | OFF |

【SETTING OF DIP SWITCH B】

| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|----------------------|---------------|-----|-----|-----|-----|-----|-----|-----|-----|
| GAME DIFFICULTY | NORMAL | OFF | OFF | | | | | | |
| | EASY | ON | OFF | | | | | | |
| | HARD | OFF | ON | | | | | | |
| | EXTRA HARD | ON | ON | | | | | | |
| HIT OF PLAYERS | WITHOUT | | | OFF | | | | | |
| | WITH | | | ON | | | | | |
| CLEAR STAGE POWER UP | WITH | | | | OFF | | | | |
| | WITHOUT | | | | ON | | | | |
| REGAIN POWER | WITH | | | | | OFF | | | |
| | WITHOUT | | | | | ON | | | |
| SHOOTER | 1SHOOTER | | | | | | OFF | | |
| | 4SHOOTER | | | | | | ON | | |
| SETTING SELECT | 3PLAY | | | | | | | OFF | OFF |
| | 2PLAY | | | | | | | ON | OFF |
| | 4PLAY | | | | | | | OFF | ON |
| | 4PLAY (2P 2P) | | | | | | | ON | ON |

(ATTENTION) It must be main power "OFF"
if you operate dip switches.

CONNECTING DIAGRAM

3P CONNECTER

| | |
|----|-------------------|
| 1 | COIN 3 |
| 2 | 3P SELECT |
| 3 | 3P LEFT |
| 4 | 3P RIGHT |
| 5 | 3P UP |
| 6 | 3P DOWN |
| 7 | 3P ATTACK BUTTON |
| 8 | 3P JUMP BUTTON |
| 9 | 2P SPECIAL ATTACK |
| 10 | |
| 11 | SERVICE |
| 12 | COIN METER 3 |
| 13 | LOCKOUT 3 |
| 14 | GND |
| 15 | GND |

4P CONNECTER

| | |
|----|-------------------|
| 1 | COIN 4 |
| 2 | 4P SELECT |
| 3 | 4P LEFT |
| 4 | 4P RIGHT |
| 5 | 4P UP |
| 6 | 4P DOWN |
| 7 | 4P ATTACK BUTTON |
| 8 | 4P JUMP BUTTON |
| 9 | 4P SPECIAL ATTACK |
| 10 | |
| 11 | |
| 12 | COIN METER 4 |
| 13 | LOCKOUT 4 |
| 14 | GND |
| 15 | GND |

G CONNECTER (JAMMA)

| SOLDER-SIDE | | PARTS-SIDE | |
|-------------------|------|-------------------|--|
| GND | A 1 | GND | |
| GND | B 2 | GND | |
| +5V | C 3 | +5V | |
| +5V | D 4 | +5V | |
| -5V | E 5 | -5V | |
| +12V | F 6 | +12V | |
| POST | H 7 | POST | |
| COIN METER 2 | J 8 | COIN METER 1 | |
| COIN LOCKOUT 2 | K 9 | COIN LOCKOUT 1 | |
| SPEAKER (-) | L 10 | SPEAKER (+) | |
| SOUND GND | M 11 | SOUND | |
| VIDEO G | N 12 | VIDEO R | |
| VIDEO SYNC | P 13 | VIDEO B | |
| SERVICE SW | R 14 | VIDEO GND | |
| TILT SW | S 15 | | |
| COIN 2 | T 16 | COIN 1 | |
| 2P SELECT | U 17 | 1P SELECT | |
| 2P UP | V 18 | 1P UP | |
| 2P DOWN | W 19 | 1P DOWN | |
| 2P LEFT | X 20 | 1P LEFT | |
| 2P RIGHT | Y 21 | 1P RIGHT | |
| 2P ATTACK BUTTON | Z 22 | 1P ATTACK BUTTON | |
| 2P JUMP BUTTON | a 23 | 1P JUMP BUTTON | |
| 2P SPECIAL ATTACK | b 24 | 1P SPECIAL ATTACK | |
| | c 25 | | |
| | d 26 | | |
| GND | e 27 | GND | |
| GND | f 28 | GND | |

M CONNECTER

| | |
|---|-------------|
| 1 | VIDEO-RED |
| 2 | VIDEO-GREEN |
| 3 | VIDEO-BLUE |
| 4 | VIDEO-SYNC |
| 5 | VIDEO-GND |

S CONNECTER

| | |
|---|-----------|
| 1 | SOUND (+) |
| 2 | SOUND (-) |
| 3 | |

