

SLIVER MANUAL (HARDWARE REFERANCE)


DIP SWITCH - A

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|--------------------|--------|-----|-----|-----|-----|-----|-----|-----|
| 1 COIN 1 CREDIT | OFF | OFF | OFF | OFF | | | | |
| 1 COIN 2 CREDIT | ON | OFF | OFF | OFF | | | | |
| 1 COIN 3 CREDIT | OFF | ON | OFF | OFF | | | | |
| 1 COIN 4 CREDIT | ON | ON | OFF | OFF | | | | |
| 1 COIN 5 CREDIT | OFF | OFF | ON | OFF | | | | |
| 5 COIN 1 CREDIT | ON | ON | OFF | ON | | | | |
| 4 COIN 1 CREDIT | OFF | OFF | ON | ON | | | | |
| 3 COIN 1 CREDIT | ON | OFF | ON | ON | | | | |
| 2 COIN 1 CREDIT | OFF | ON | ON | ON | | | | |
| FREE PLAY | ON | ON | ON | ON | | | | |
| LIFES | 5 | | | | ON | ON | | |
| | 4 | | | | OFF | ON | | |
| | 3 | | | | ON | OFF | | |
| | 2 | | | | OFF | OFF | | |
| PLAY TIME INTERVAL | LONGER | | | | | | ON | ON |
| | LONG | | | | | | OFF | ON |
| | NORMAL | | | | | | OFF | OFF |
| | SHORT | | | | | | ON | OFF |
| FACTORY DEFAULT | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF |

DIP SWITCH - B

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|---------------------|------------|-----|-----|-----|-----|-----|-----|----|
| DIFFICULTY LEVEL | NORMAL | OFF | OFF | | | | | |
| | EASY | ON | OFF | | | | | |
| | HARD | OFF | ON | | | | | |
| | HARDEST | ON | ON | | | | | |
| 2PLAYER MODE | YES | | | OFF | | | | |
| | NO | | | ON | | | | |
| ADVERTISE MUSIC | ON | | | | OFF | | | |
| | OFF | | | | ON | | | |
| DRAW INSERT | YES | | | | | OFF | | |
| | NO | | | | | ON | | |
| JOYSTICK INPUT MODE | STEP | | | | | | OFF | |
| | CONTINUOUS | | | | | | ON | |
| GAME PAUSED (TEST) | | | | | | | OFF | |
| | | | | | | | ON | |
| UNUSED (MUST ON) | | | | | | | | ON |
| FACTORY DEFAULT | OFF | OFF | OFF | OFF | OFF | OFF | OFF | ON |

JOYSTICK CONTROL DIRECTION

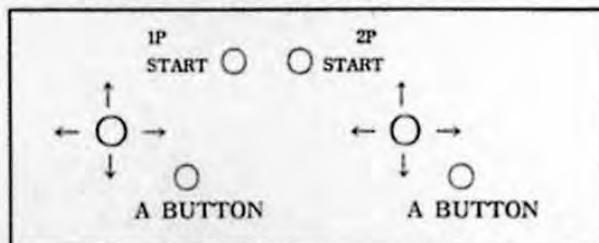

MONITOR TYPE : HORIZONTAL

PIN ASSIGNMENT(JAMMA)

| COMPONENT SIDE | | SOLDER SIDE | |
|----------------|------|-------------|--|
| GND | 1 A | GND | |
| GND | 2 B | GND | |
| +5V | 3 C | +5V | |
| +5V | 4 D | +5V | |
| | 5 E | | |
| +12V | 6 F | +12V | |
| | 7 H | | |
| | 8 I | | |
| | 9 K | | |
| SPEAKER(+) | 10 L | SPEAKER(-) | |
| | 11 M | | |
| RED | 12 N | GREEN | |
| BLUE | 13 P | SYNC | |
| GND | 14 R | | |
| | 15 S | | |
| COIN | 16 T | | |
| 1P START | 17 U | 2P START | |
| 1P UP | 18 V | 2P UP | |
| 1P DOWN | 19 W | 2P DOWN | |
| 1P LEFT | 20 X | 2P LEFT | |
| 1P RIGHT | 21 Y | 2P RIGHT | |
| 1P SW ⊕ | 22 Z | 2P SW ⊕ | |
| | 23 a | | |
| | 24 b | | |
| | 25 c | | |
| | 26 d | | |
| GND | 27 e | GND | |
| GND | 28 f | GND | |

BOARD DIAGRAM

