 


TOKI

SOLDER SIDE	PIN #		PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
	H	7	
COIN COUNTER 2 (GND)	J	8	COIN COUNTER 1 (GND)
SPEAKER (-)	K	9	SPEAKER (+)
	L	10	
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SWITCH	R	14	VIDEO GND
	S	15	
COIN SWITCH 2	T	16	COIN SWITCH 1
START SWITCH 2	U	17	START SWITCH 1
2P CONTROL 1 UP	V	18	1P CONTROL 1 UP
2P CONTROL 2 DOWN	W	19	1P CONTROL 2 DOWN
2P CONTROL 3 LEFT	X	20	1P CONTROL 3 LEFT
2P CONTROL 4 RIGHT	Y	21	1P CONTROL 4 RIGHT
2P CONTROL 5 PUSH 1	Z	22	1P CONTROL 5 PUSH 1
2P CONTROL 6 PUSH 2	a	23	1P CONTROL 6 PUSH 2
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

MONITOR
HORIZONTAL

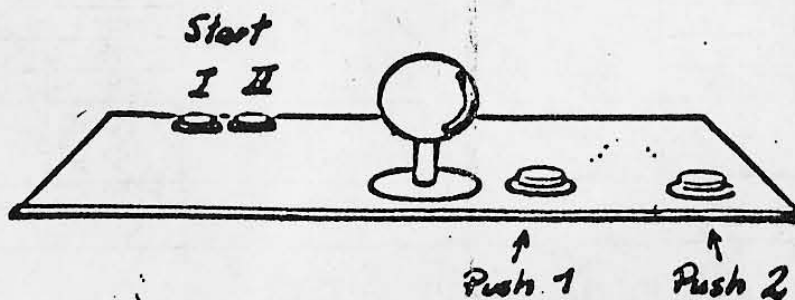

"TOKI" (JU JU LEGEND)

DIP-2

FUNCTION	SWITCH	1	2	3	4	5	6	7	8
NO. OF LIVES	3	OFF	OFF						
	2	ON	OFF						
	5	OFF	ON						
	∞	ON	ON						
EXTENDED PLAY	70,000 only			OFF	OFF				
	5k-15k			ON	OFF				
	10k - 20k			OFF	ON				
	EVERY 70k			ON	ON				
DIFFICULTY	1 (NORMAL)					OFF	OFF		
	2 (EASY)					ON	OFF		
	3 (HARD)					OFF	ON		
	4 (HARDEST)					ON	ON		
CONTINUE PLAY	YES							OFF	
	NO							ON	
DEMO SOUND	YES								OFF
	NO								ON





HORIZONTAL SCREEN
ALTERNATE TWO PLAYER GAME
1 x 8WAY JOYSTICK 2 BUTTONS

JAMMA PIN OUT

MODE 2	COIN MECH. (A)	1 COIN 1 PLAY	(ON)	OFF	OFF				
		2 COINS 1 PLAY		ON	OFF				
		3 COINS 1 PLAY		OFF	ON				
		5 COINS 1 PLAY		ON	ON				
MODE 2	COIN MECH. (B)	1 COIN 2 PLAY				OFF	OFF		
		1 COIN 3 PLAY				ON	OFF		
		1 COIN 5 PLAY				OFF	ON		
		1 COIN 6 PLAY	(ON)			ON	ON		
\$\$\$-CONTROL PANEL		1P (1 JOYSTICK 2 BUTTONS)						OFF	
		2P (2 JOYSTICKS 4 BUTTONS)						ON	
CABINET		UP-RIGHT							OFF
		TABLE							ON
SCREEN INVERT		NORMAL							OFF
		INVERT							ON

\$\$\$- ATTENTION!!! DIP SW16 ALTERNATE TWO PLAYER GAME.

    AS ILLUSTRATED BELOW, THE GAME WORKS WITH BOTH 1P OR 2P CONTROL PANEL, UPRIGHT OR COCKTAIL.

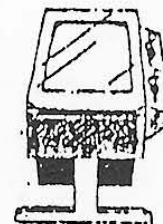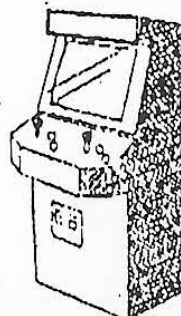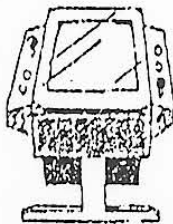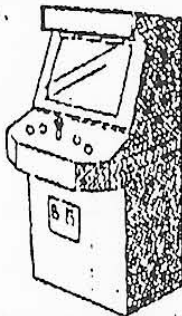




COREO

CORPORATION

Dae Yang B/D 204, 5-27 Shin Kong Duck-Dong
Mapo-Ku Seoul, Korea.

 TEL : (02) 703-5277/8. FAX : (02) 704-1781

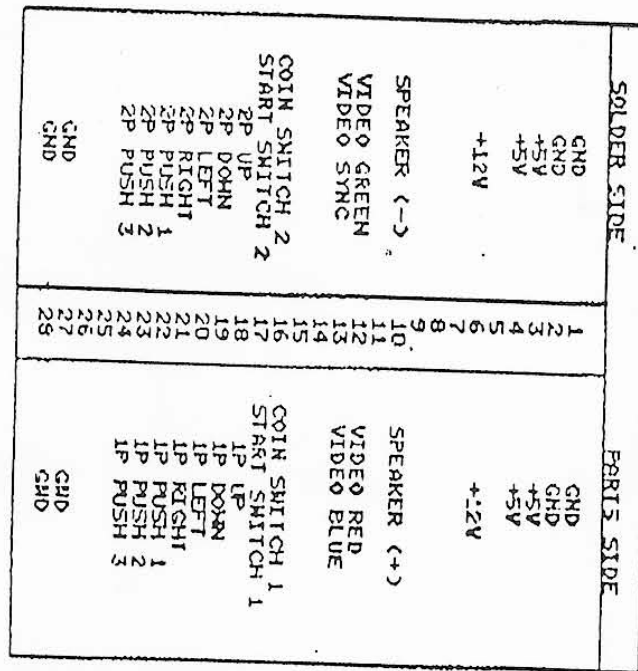

DIP SW1	COIN MODE 1		COIN MODE 2		DIP SW2	NO. OF LIVES	EXTENDED PLAY	DIFFICULTY	CONTINUE PLAY	DEMO SOUND
	COIN CODE	COIN MODE 1	COIN CODE	COIN MODE 2						
1	1COIN	1PLAY	1COIN	1PLAY	1	3	70,000 ONLY	1 NORMAL	YES	OFF
2	2COINS	1PLAY	2COINS	1PLAY	2	2	5K - 15K	2 EASY	NO	OFF
3	3COINS	1PLAY	3COINS	1PLAY	3	1	10K - 20K	3 HARD	NO	OFF
4	4COINS	1PLAY	4COINS	1PLAY	4	0	EVERY 70K	4 HARDEST	NO	OFF
5	5COINS	1PLAY	5COINS	1PLAY	5	OFF			NO	OFF
6	6COINS	1PLAY	6COINS	1PLAY	6	OFF			NO	OFF
7	7COINS	1PLAY	7COINS	1PLAY	7	OFF			NO	OFF
8	8COINS	1PLAY	8COINS	1PLAY	8	OFF			NO	OFF
9	9COINS	1PLAY	9COINS	1PLAY	9	OFF			NO	OFF
10	10COINS	1PLAY	10COINS	1PLAY	10	OFF			NO	OFF
11	11COINS	1PLAY	11COINS	1PLAY	11	OFF			NO	OFF
12	12COINS	1PLAY	12COINS	1PLAY	12	OFF			NO	OFF
13	13COINS	1PLAY	13COINS	1PLAY	13	OFF			NO	OFF
14	14COINS	1PLAY	14COINS	1PLAY	14	OFF			NO	OFF
15	15COINS	1PLAY	15COINS	1PLAY	15	OFF			NO	OFF
16	16COINS	1PLAY	16COINS	1PLAY	16	OFF			NO	OFF
17	17COINS	1PLAY	17COINS	1PLAY	17	OFF			NO	OFF
18	18COINS	1PLAY	18COINS	1PLAY	18	OFF			NO	OFF
19	19COINS	1PLAY	19COINS	1PLAY	19	OFF			NO	OFF
20	20COINS	1PLAY	20COINS	1PLAY	20	OFF			NO	OFF
21	21COINS	1PLAY	21COINS	1PLAY	21	OFF			NO	OFF
22	22COINS	1PLAY	22COINS	1PLAY	22	OFF			NO	OFF
23	23COINS	1PLAY	23COINS	1PLAY	23	OFF			NO	OFF
24	24COINS	1PLAY	24COINS	1PLAY	24	OFF			NO	OFF
25	25COINS	1PLAY	25COINS	1PLAY	25	OFF			NO	OFF
26	26COINS	1PLAY	26COINS	1PLAY	26	OFF			NO	OFF
27	27COINS	1PLAY	27COINS	1PLAY	27	OFF			NO	OFF
28	28COINS	1PLAY	28COINS	1PLAY	28	OFF			NO	OFF

DIP SW2	NO. OF LIVES	EXTENDED PLAY	DIFFICULTY	CONTINUE PLAY	DEMO SOUND
1	3	70,000 ONLY	1 NORMAL	YES	OFF
2	2	5K - 15K	2 EASY	NO	OFF
3	1	10K - 20K	3 HARD	NO	OFF
4	0	EVERY 70K	4 HARDEST	NO	OFF
5	OFF			NO	OFF
6	OFF			NO	OFF
7	OFF			NO	OFF
8	OFF			NO	OFF
9	OFF			NO	OFF
10	OFF			NO	OFF
11	OFF			NO	OFF
12	OFF			NO	OFF
13	OFF			NO	OFF
14	OFF			NO	OFF
15	OFF			NO	OFF
16	OFF			NO	OFF
17	OFF			NO	OFF
18	OFF			NO	OFF
19	OFF			NO	OFF
20	OFF			NO	OFF
21	OFF			NO	OFF
22	OFF			NO	OFF
23	OFF			NO	OFF
24	OFF			NO	OFF
25	OFF			NO	OFF
26	OFF			NO	OFF
27	OFF			NO	OFF
28	OFF			NO	OFF

18008

18008

21010

"

"

"

"

"

"

"

6116

6116

2018

6116

TO KI 24 22





"TOKI"

JAMMA PIN OUTS
HORIZONTAL SCREEN
1 x 8 WAY JOYSTICK 2 BUTTONS

DIP-1

FUNCTION		SWITCH	1	2	3	4	5	6	7	8	
COIN MODE SELECT	COIN MODE 1		OFF								
	COIN MODE 2		ON								
COIN MODE	MODE 1	1 COIN 1 PLAY	(OFF)	OFF	OFF	OFF	OFF				
		2 COINS 1 PLAY	↑	ON	OFF	OFF	OFF				
		3 COINS 1 PLAY		OFF	ON	OFF	OFF				
		4 COINS 1 PLAY		ON	ON	OFF	OFF				
		5 COINS 1 PLAY		OFF	OFF	ON	OFF				
		6 COINS 1 PLAY		ON	OFF	ON	OFF				
		1 COIN 2 PLAY		OFF	ON	ON	OFF				
		1 COIN 3 PLAY		ON	ON	ON	OFF				
		1 COIN 4 PLAY		OFF	OFF	OFF	ON				
		1 COIN 5 PLAY		ON	OFF	OFF	ON				
		1 COIN 6 PLAY		OFF	ON	OFF	ON				
		2 COINS 3 PLAY		ON	ON	OFF	ON				
		3 COINS 2 PLAY		OFF	OFF	ON	ON				
		5 COINS 3 PLAY		ON	OFF	ON	ON				
		8 COINS 3 PLAY		OFF	ON	ON	ON				
		FREE PLAY		(OFF)	ON	ON	ON	ON			
		MODE 2	COIN MECH. (A)	1 COIN 1 PLAY	(ON)	OFF	OFF				
2 COINS 1 PLAY	↑			ON	OFF						
3 COINS 1 PLAY				OFF	ON						
5 COINS 1 PLAY				ON	ON						
COIN MECH. (B)	1 COIN 2 PLAY					OFF	OFF				
	1 COIN 3 PLAY					ON	OFF				
	1 COIN 5 PLAY					OFF	ON				
	1 COIN 6 PLAY		(ON)			ON	ON				
\$\$\$-CONTROL PANEL	1p(1JOYSTICK 2BUTTONS)							OFF			
	2p(2JOYSTICKS 4BUTTONS)							ON			
CABINET	UP-RIGHT								OFF		
	TABLE								ON		
SCREEN INVERT	NORMAL									OFF	
	INVERT									ON	

    \$\$\$- ATTENTION!!! DIP SW#6 ALTERNATE TWO PLAYER GAME.
AS ILLUSTRATED BELOW, THE GAME WORKS WITH BOTH 1P OR 2P
CONTROL PANEL, UPRIGHT OR COCKTAIL.

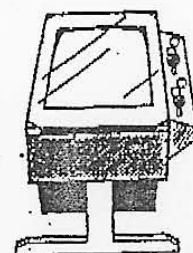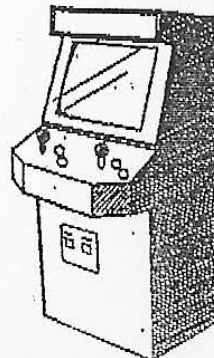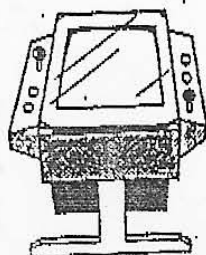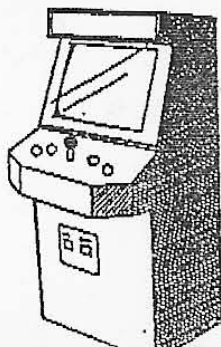

"TOKI"

DIP-2

FUNCTION		SWITCH	1	2	3	4	5	6	7	8
NO. OF LIVES	3		OFF	OFF						
	2		ON	OFF						
	5		OFF	ON						
	∞		ON	ON						
EXTENDED PLAY	70,000 only				OFF	OFF				
	5k-15k				ON	OFF				
	10k - 20k				OFF	ON				
	EVERY 70k				ON	ON				
DIFFICULTY	1 (NORMAL)						OFF	OFF		
	2 (EASY)						ON	OFF		
	3 (HARD)						OFF	ON		
	4 (HARDEST)						ON	ON		
CONTINUE PLAY	YES								OFF	
	NO								ON	
DEMO SOUND	YES									OFF
	NO									ON

HORIZONTAL SCREEN
 ALTERNATE TWO PLAYER GAME
 1 x 8WAY JOYSTICK 2 BUTTONS

JAMMA PIN OUT

INSTRUCTION

The evil hand of BASHTAR has seized the lovely MOHO. Her beloved, the mighty TOKI, has also been dealt a wicked blow. Now, reduced to be a lowly ape, Toki must risk a perilous journey to free Miho and regain his manhood.

Miho's life is all depended on your skill of using a joystick, shoot & jump buttons.

++You can JUMP ON TOP of ENEMIES to kill them & to reach bonus items.

TOKI

Betreibe die Prinzessin, um wieder zurückverwandelt zu werden. Auf dem Weg liegende Symbole aufnehmen! Sie helfen Dir auf Deinem schweren und langen Weg.

Taste 1: schießen

Taste 2: springen

VIEL ERFOLG!