

PARTS	SOLDER	
+12V OUT	A 1	+12V OUT
LOCK-OUT-SQ	B 2	START-LAMP
COIN-COUNT-1	C 3	COIN-COUNT-2
SERVICE	D 4	TEST
COIN 1	E 5	COIN 2
START &	F 6	START /
SELECT	G 7	SHIFT
GND	H 8	GND
SOUND 1	I 9	SOUND 2
SOUND 3	J 10	SOUND 4
SOUND-GND	K 11	SOUND-GND
VOL-GND	L 12	VOL-GND
GAS	M 13	BRAKE
VOL-VCC	N 14	VOL-VCC
+5V-OUT	O 15	+5V-OUT
	P 16	
STEERING 1	Q 17	STEERING 2
GND	R 18	GND

PARTS	OLDER	
GND	A 1	GND
GND	B 2	GND
+5V	C 3	+5V
+5V	D 4	+5V
RGB	E 5	RGB R
SYNC	F 6	RGB B
	G 7	
	H 8	
SOUND 1	I 9	SOUND 2
SOUND 3	J 10	SOUND 4
SP.FR+	K 11	SP.FR-
SP.FL+	L 12	SP.FL-
SP.RR+	M 13	SP.RR-
SP.RL+	N 14	SP.RL-
+12V	O 15	+12V
+12V	P 16	+12V
GND	Q 17	GND
GND	R 18	GND

1-- 中基板用ハーネス図 (変更部分) J4-- 下基板用ハーネス図 (従来通)  
IPSW 1

項目	内容	スイッチの状態							
		1	2	3	4	5	6	7	8
料金 1-1	1 コイン / 1 クレジット						OFF	OFF	OFF
	2 - / 1 -						ON	OFF	OFF
	3 - / 1 -						OFF	ON	OFF
	1 - / 6 -						ON	ON	OFF
	1 - / 2 -						OFF	OFF	ON
	1 - / 3 -						ON	OFF	ON
	2 - / 3 -						OFF	ON	ON
料金 1-2	1 コイン / 1 クレジット						OFF	OFF	
	1 - / 2 -						ON	OFF	
	2 - / 1 -						OFF	ON	
	2 - / 3 -						ON	ON	
時間	90		OFF	OFF					
	100		ON	OFF					
	110		OFF	ON					
	120		ON	ON					
-ル	3周		OFF						
	4周		ON						

○印は 出荷時

項目	内容	1	2	3	4	5	6	7	8
		EXTENDED (グランズリ)	RANK A						OFF
	B						ON	OFF	OFF
	C						OFF	ON	OFF
	D						ON	ON	OFF
	E						OFF	OFF	ON
	F						ON	OFF	ON
	G						OFF	ON	ON
	H						ON	ON	ON
PRACTICE (予選)	RANK A			OFF	OFF	OFF			
	B			ON	OFF	OFF			
	C			OFF	ON	OFF			
	D			ON	ON	OFF			
	E			OFF	OFF	ON			
	F			ON	OFF	ON			
	G			OFF	ON	ON			
	H			ON	ON	ON			
アトラクト音	無		OFF						
	有		ON						

○印は出荷時

### 予選ランク

順位 RANK	1	2	3	4	5	6	7	8
A	57" 50	59" 00	61" 00	63" 00	65" 00	67" 00	69" 00	71" 00
B	58" 00	60" 00	62" 00	64" 00	66" 00	68" 00	70" 00	72" 00
C	58" 50	60" 00	62" 00	64" 00	66" 00	68" 00	70" 00	73" 00
D	59" 00	61" 00	63" 00	65" 00	67" 00	69" 00	71" 00	74" 00
E	65" 50	67" 50	70" 00	72" 50	74" 50	76" 50	79" 00	81" 00
F	66" 00	68" 00	70" 00	73" 00	75" 00	77" 00	80" 00	82" 00
G	57" 00	59" 00	61" 00	63" 00	65" 00	67" 00	69" 00	71" 00
H	59" 50	61" 00	63" 00	66" 00	68" 00	70" 00	72" 00	75" 00

NSM TOP RACER.

# Top-Racer

## (4) 音量の調整

音量の調整は、コイン扉を開け正面にある音量ボリュームで各スピーカー音を調整します。  
(P7: 図5-1 参照)

## (5) PCモードの説明

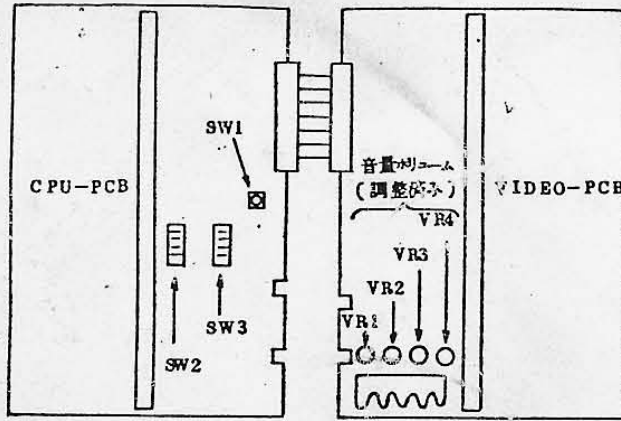


図5-4 PCモード

## (6) ゲーム料金及び難易度の切換え

オプションスイッチは、ゲームPCモード(図5-4 参照)上にあります。  
このスイッチにより1ゲーム当りの料金、難易度、ゲーム時間等の切換えができます。  
なお、オプションスイッチの切換えは電源を切ってから行って下さい。また、オプションスイッチ切換え後、テストスイッチによるセルフテストを行い、画面でスイッチの状態を確認して下さい。

項目	内容	スイッチの状態										
		1	2	3	4	5	6	7	8			
ゲーム料金 1 COIN	1コイン/1クレジット	X								OFF	OFF	OFF
	2 / 1									ON	OFF	OFF
	3 / 1									OFF	ON	OFF
	1 / 6									ON	ON	OFF
	1 / 2									OFF	OFF	ON
	1 / 3									ON	OFF	ON
	2 / 3									OFF	ON	ON
	1 / 5									ON	ON	ON
	ゲーム料金 2 COIN	1コイン/1クレジット									OFF	OFF
1 / 2									ON	OFF		
2 / 1									OFF	ON		
2 / 3									ON	ON		
TIME FOR PRACTICE	50									OFF	OFF	
予選時間	100	X								ON	OFF	
	110									OFF	ON	
	120									ON	ON	
3周		X								OFF		
GOAL	4周									ON		

Top-Spiel Löschen: 1.) Testprogramm einschalten  
2.) Gaspedal treten u. Gangschaltung umschalten!!

## DIP SW

項目	内容	スイッチの状態								
		1	2	3	4	5	6	7	8	
EXTENDED (グランプリ) (RANK GRAND PRIX)	RANK A							OFF	OFF	OFF
	" B							ON	OFF	OFF
	X " C							OFF	ON	OFF
	" D							ON	ON	OFF
	" E							OFF	OFF	ON
	" F							ON	OFF	ON
	" G							OFF	ON	ON
	" H							ON	ON	ON
PRACTICE (予選)	RANK A			OFF	OFF	OFF				
	" B			ON	OFF	OFF				
	X " C			OFF	ON	OFF				
	" D			ON	ON	OFF				
	" E			OFF	OFF	ON				
	" F			ON	OFF	ON				
	" G			OFF	ON	ON				
	" H			ON	ON	ON				
SOUND アトラクト音	無	OFF								
ATTRACT	有	ON								

表5-2 SW3のON-OFF表

注)・2番目のスイッチは使用せず。  
(通常はOFF状態)

○印は、出荷時の状態。

順位 RANK	1	2	3	4	5	6	7	8
A	57' 50	59' 00	61' 00	63' 00	65' 00	67' 00	69' 00	71' 00
B	58' 00	60' 00	62' 00	64' 00	66' 00	68' 00	70' 00	72' 00
C	58' 50	60' 00	62' 00	64' 00	66' 00	68' 00	70' 00	73' 00
D	59' 00	61' 00	63' 00	65' 00	67' 00	69' 00	71' 00	74' 00
E	65' 50	67' 50	70' 00	72' 50	74' 00	76' 50	79' 00	81' 00
F	66' 00	68' 00	70' 00	73' 00	75' 00	77' 00	80' 00	82' 00
G	57' 00	59' 00	61' 00	63' 00	65' 00	67' 00	69' 00	71' 00
H	59' 50	61' 00	63' 00	66' 00	68' 00	70' 00	72' 00	75' 00


RANK OF PRACTICE

(未満)

表5-3 PRACTICE(予選)のランク内容

# NSM TOP RACER



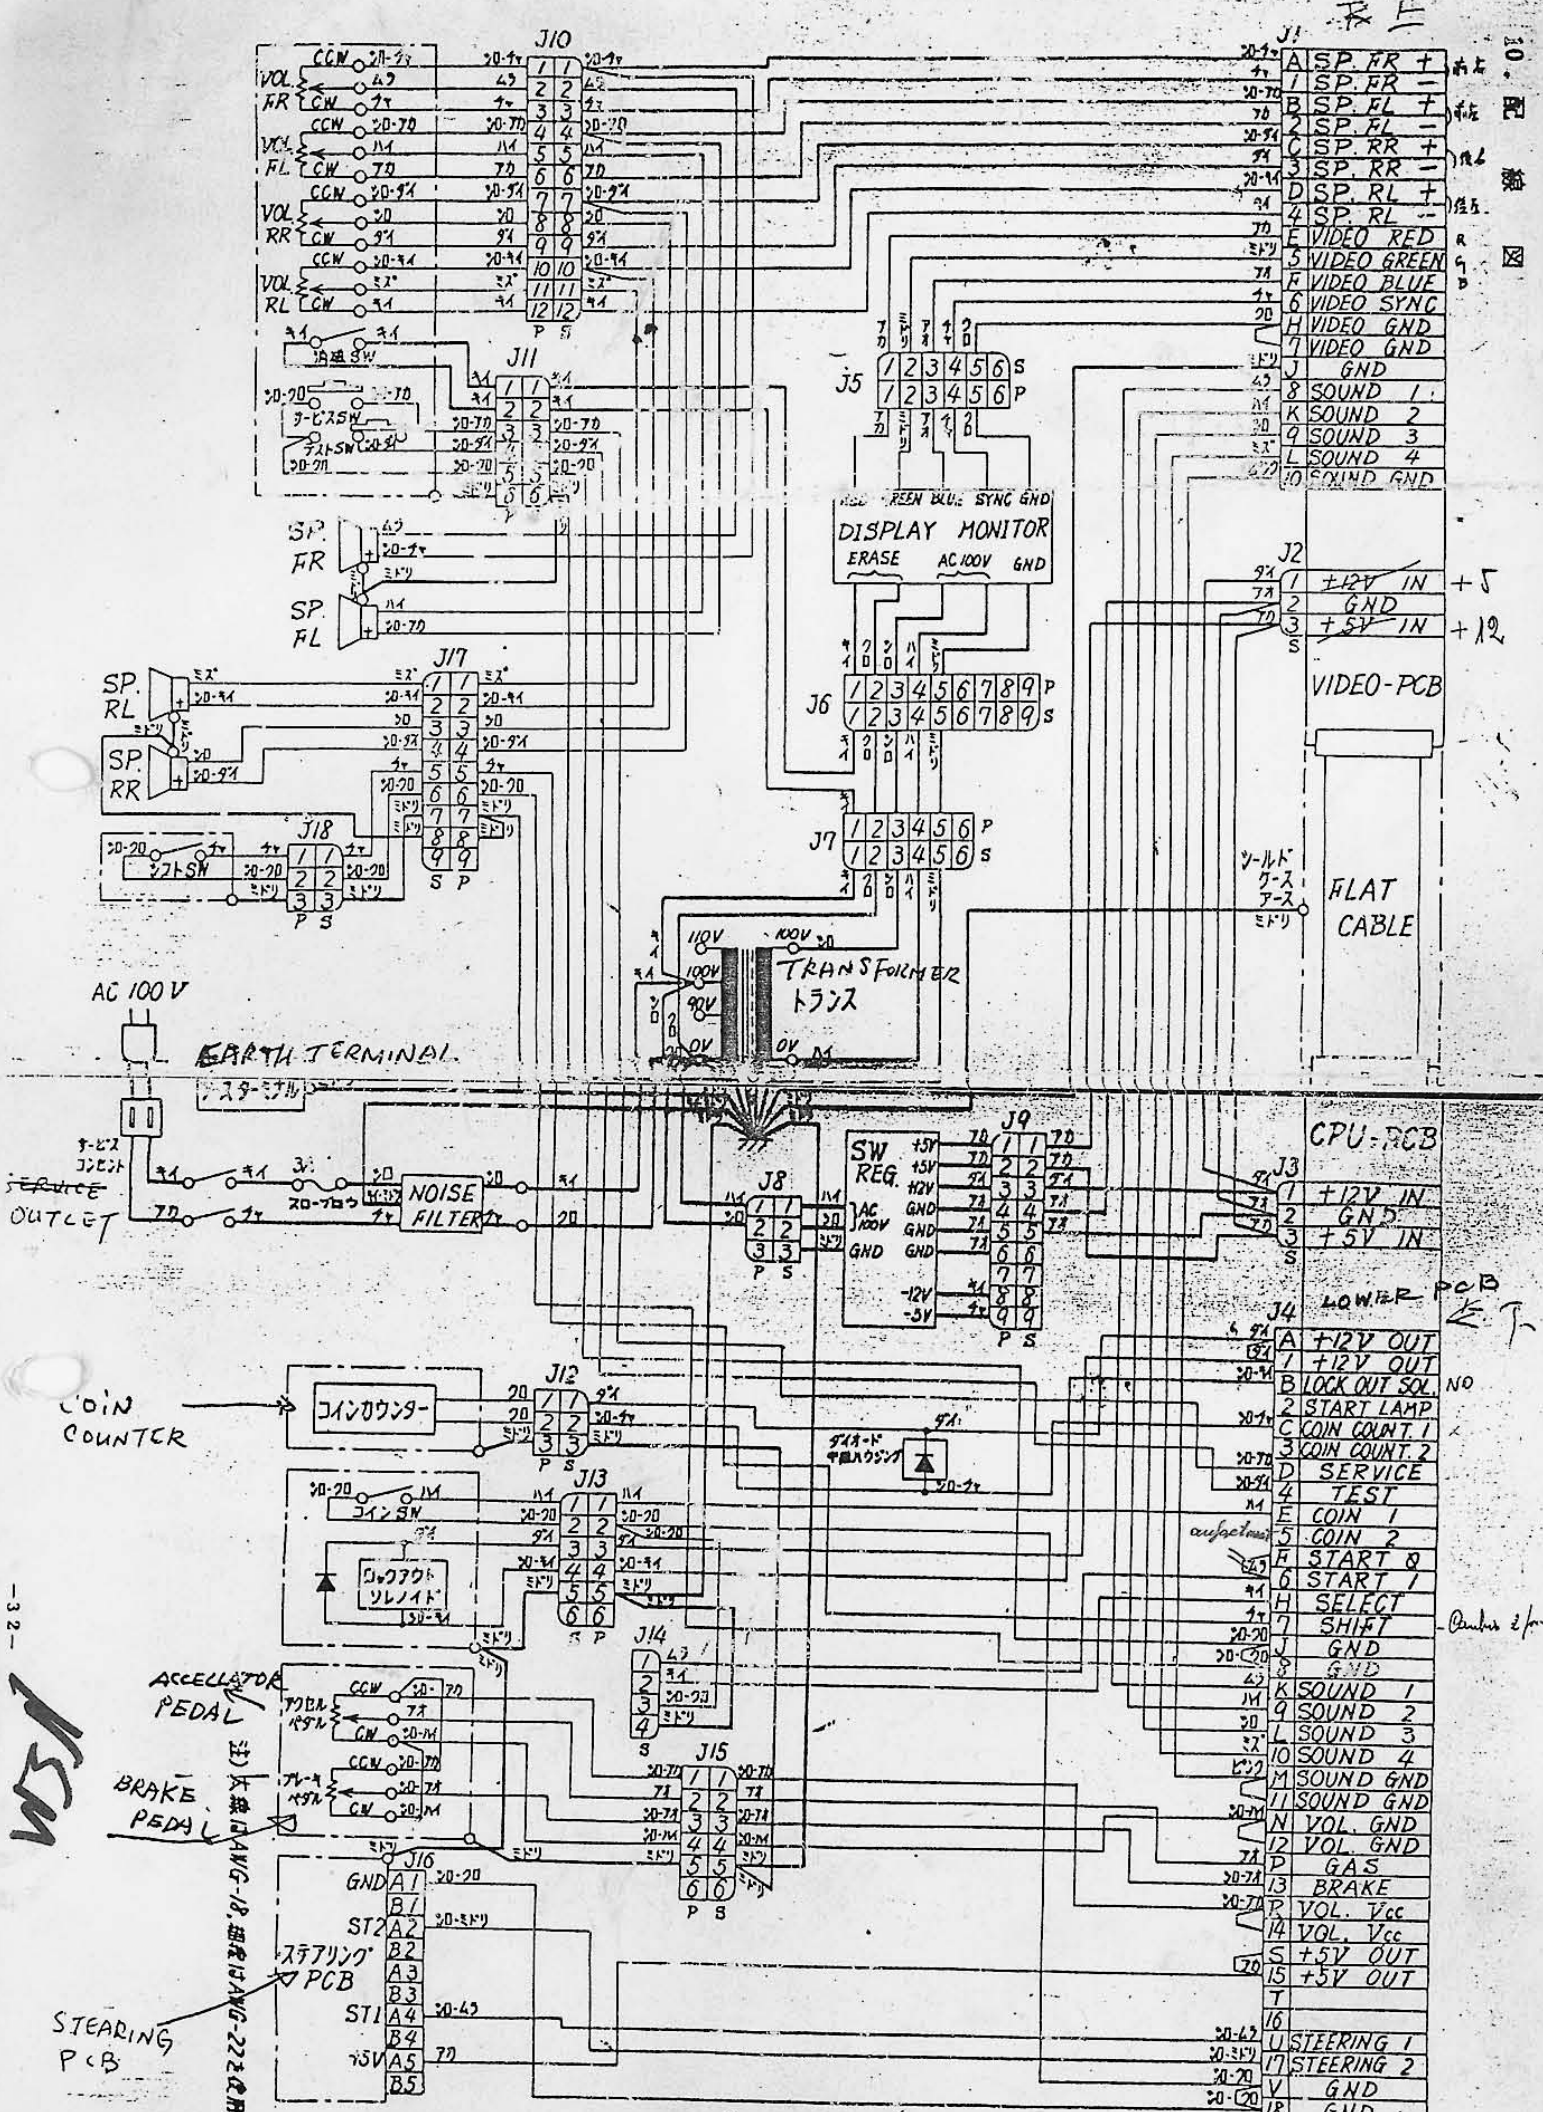

# TOP RACER

RSM

EXPLANATION FOR DIP SWITCH (( TOP RACER ))  
 \*\*\*\*\*

SWITCH NO. 3

NOTE: ( ) MARKS - FACTORY SPECS

I T E M S	CONTAINS	CONDITION FOR DIP SWITCH							
		1	2	3	4	5	6	7	8
EXTENDED	RANK A						OFF	OFF	OFF
	" B						(ON)	(OFF)	(OFF)
	" C						OFF	ON	OFF
	" D						ON	ON	OFF
	" E						OFF	OFF	ON
	" F						ON	OFF	ON
	" G						OFF	ON	ON
	" H						ON	ON	ON
PRACTICE	RANK A			OFF	OFF	OFF			
	" B			ON	OFF	OFF			
	" C			(OFF)	(ON)	(OFF)			
	" D			ON	ON	OFF			
	" E			OFF	OFF	ON			
	" F			ON	OFF	ON			
	" G			OFF	ON	ON			
	" H			ON	ON	ON			
ATTRACT SOUND	NO SOUND	OFF							
	SOUND	(ON)							

REMARKS: SW NO.2 MAY NOT BE USED, THE POSITION IS ALWAYS "OFF"

SWITCH NO. 2

NOTE:  MARKS - FACTORY SPECS

I T E M S	COIN / CREDIT	CONDITION FOR DIP SWITCH							
		1	2	3	4	5	6	7	8
GAME FEE	1 # / 1 #						<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	2 # / 1 #						ON	OFF	OFF
	3 # / 1 #						OFF	ON	OFF
COIN 1	1 # / 6 #						ON	ON	OFF
	1 # / 2 #						OFF	OFF	ON
	1 # / 3 #						ON	OFF	ON
	2 # / 3 #						OFF	ON	ON
	1 # / 5 #						ON	ON	ON
GAME FEE	1 # / 1 #				<input type="checkbox"/>	<input type="checkbox"/>			
	1 # / 2 #				ON	OFF			
COIN 2	2 # / 1 #				OFF	ON			
	2 # / 3 #				ON	ON			
TIME FOR PRACTICE	90 SECONDS		<input type="checkbox"/>	<input type="checkbox"/>					
	100		ON	OFF					
	110		OFF	ON					
	120		ON	ON					
GOAL	3 ROUND	OFF							
	4 ROUND	<input type="checkbox"/>							

EXPLANATION FOR RANKING AT PRACTICE

ORDER RANK	1	2	3	4	5	6	7	8
A	57' 50	59' 00	61' 00	63' 00	65' 00	67' 00	69' 00	71' 00
B	58' 00	60' 00	62' 00	64' 00	66' 00	68' 00	70' 00	72' 00
C	58' 50	60' 00	62' 00	64' 00	66' 00	68' 00	70' 00	73' 00
D	59' 00	61' 00	63' 00	65' 00	67' 00	69' 00	71' 00	74' 00
E	65' 50	67' 50	70' 00	72' 50	74' 50	76' 50	79' 00	81' 00
F	66' 00	68' 00	70' 00	73' 00	75' 00	77' 00	80' 00	82' 00
G	57' 00	59' 00	61' 00	63' 00	65' 00	67' 00	69' 00	71' 00
H	59' 50	61' 00	63' 00	66' 00	68' 00	70' 00	72' 00	75' 00