

| Parts Side | | Solder Side | | DIP SW 1 | | DIP SW 2 | | | | | | | | | |
|----------------|-----|----------------|-----|-----------------------|---------------|----------|-----|---|-----------|---|-----|-----|-----|-----|----|
| | | | | | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | |
| GND | 1 | GND | | Decreased Fuel | 8 | OFF | OFF | | | | | | | | |
| GND | 2 | GND | | Amount when | 10 | ON | OFF | | | | | | | | |
| | 3 | | | fall down | 12 | OFF | ON | | | | | | | | |
| COIN COUNTER A | 4 | COIN COUNTER B | | | 14 | ON | ON | | | | | | | | |
| 1P LEFT | 5 | 2P LEFT | | Spent Fuel | Much | | | | OFF | | | | | | |
| 1P RIGHT | 6 | 2P RIGHT | | when running | Little | | | | ON | | | | | | |
| 1P BRAKE | 7 | 2P BRAKE | | Continuation Function | | | | | | | ON | | | | |
| 2P START | 8 | 1P START | | No Function | | | | | | | OFF | | | | |
| | 9 | | | Coin Mode 2 | Selector A | | | | | | | | | | |
| COIN B | 10 | TV SYNC | | | 1coin 1credit | | | | | | OFF | OFF | | | |
| +12V | 11 | +12V | | Turn ON No.3 | 2 " 1 " | | | | | | ON | OFF | | | |
| +12V | 12 | +12V | | SW of DIP SW 2 | 3 " 1 " | | | | | | OFF | ON | | | |
| SPEAKER (-) | 13 | SPEAKER (+) | | | Free Play | | | | | | ON | ON | | | |
| 1P ACCELERATOR | 14 | 2P ACCELERATOR | | | Selector B. | | | | | | | | | | |
| TV RED | 15 | TV GREEN | | | 1 " 2 " | | | | | | | OFF | OFF | | |
| TV BLUE | 16 | | | | 1 " 3 " | | | | | | | ON | OFF | | |
| | 17 | | | | 1 " 5 " | | | | | | | OFF | ON | | |
| | 18 | | | | 1 " 6 " | | | | | | | ON | ON | | |
| SERVICE SW | 19 | COIN A | | Coin Mode 1 | 1 " 1 " | | | | | | OFF | OFF | OFF | OFF | |
| +5V | 20 | +5V | | | 2 " 1 " | | | | | | ON | OFF | OFF | OFF | |
| +5V | 21 | +5V | | Turn OFF No.3 | 3 " 1 " | | | | | | OFF | ON | OFF | OFF | |
| GND | 22 | GND | | SW of DIP SW 2 | 4 " 1 " | | | | | | ON | ON | OFF | OFF | |
| | | | | | 5 " 1 " | | | | | | OFF | OFF | ON | OFF | |
| | | | | | 6 " 1 " | | | | | | ON | OFF | ON | OFF | |
| DIP SW 2 | | | | | | | | | | | | | | | |
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | | | | | | |
| Normal Screen | OFF | | | | | | | | 1 " 2 " | | | OFF | OFF | OFF | ON |
| Screen Reverse | ON | | | | | | | | 1 " 3 " | | | ON | OFF | OFF | ON |
| Table Type | | OFF | | | | | | | 1 " 4 " | | | OFF | ON | OFF | ON |
| Upright Type | | ON | | | | | | | 1 " 5 " | | | ON | ON | OFF | ON |
| Coin Mode 1 | | | OFF | | | | | | 1 " 6 " | | | OFF | OFF | ON | ON |
| Coin Mode 2 | | | ON | | | | | | | | | | | | |
| Stop Mode | | | | ON | | | | | | | | | | | |
| No Stop Mode | | | | OFF | | | | | Free Play | | | ON | ON | ON | ON |
| No Death Mode | | | | | ON | | | | | | | | | | |
| Nil | | | | | OFF | | | | | | | | | | |
| No Test | | | | | | OFF | | | | | | | | | |
| Test | | | | | | ON | | | | | | | | | |

*No. 4 and No. 6 of DIP SW 2 are usually ON

- * Please set coin mode as follow
1. When you use one coin selector or two same kinds of coin selector (e.g. for ¥100 coin 2pcs) Please set mode 1.
 2. When you use different kind of coin selector 2pcs (e.g. Selector A FOR ¥50 coin, Selector B for ¥100 coin) Please set mode 2.