

TROJAN 86/05/22

DIP SW 1 1 2 3 4 5 6 7 8

COIN 1

1COIN/1PLAY
1COIN/2PLAY
1COIN/3PLAY
2COIN/1PLAY

OFF OFF
OFF ON
ON OFF
ON ON

COIN 2

1COIN/1PLAY
2COIN/1PLAY
3COIN/1PLAY
4COIN/1PLAY

OFF OFF
OFF ON
ON OFF
ON ON

PLAYED

3
2
4
5

OFF OFF
OFF ON
ON OFF
ON ON

SCREEN NORMAL NO
YES

OFF
ON

CONTINUE MODE NO
YES

OFF
ON

DIP SW 2 1 2 3 4 5 6 7 8

TYPE

UP RIGHT 1
UP RIGHT 2
TABLE

 
ON ON
OFF ON
ON OFF

BONUS

30000/60000
30000/70000
30000/80000
20000/60000
20000/70000
20000/80000
40000/80000
0

OFF OFF OFF
OFF OFF ON
OFF ON OFF
OFF ON ON
ON OFF OFF
ON OFF ON
ON ON OFF
ON ON ON

GAME START 1BUTTON OFF OFF OFF
2BUTTON OFF OFF ON
3BUTTON OFF ON OFF
4BUTTON OFF ON ON
5BUTTON ON OFF OFF
6BUTTON ON OFF ON

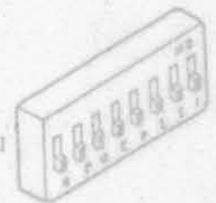

◎ 設置の概要

- CRT モニター

横両面

 
 
- コントロールパネルの配置



○ ボタン1 …… 剣 (素手の時、パンチ)

○ ボタン2 …… 盾 (素手の時、キック)

- DIP sw の位置

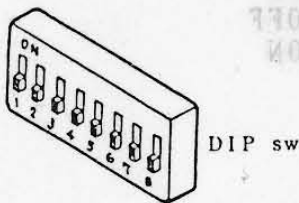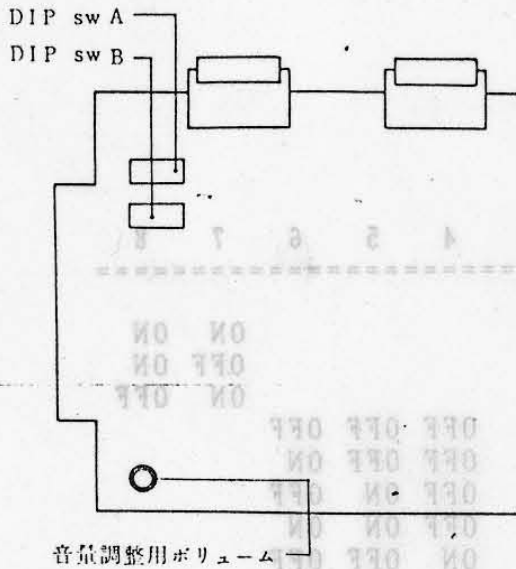

Solele

Part

半田面			部品面
GND	A	1	GND
GND	B	2	GND
+5	C	3	+5
+5	D	4	+5
ⓐ	E	5	ⓑ
SYNC	F	6	ⓒ
GND	H	7	GND
	J	8	
	K	9	SHOT 2
	L	10	SHOT 1
	M	11	UP 1
	N	12	DOWN 1
	P	13	LEFT 1
	R	14	RIGHT 1
GND	S	15	GND
2P SELECT	T	16	1P SELECT
	U	17	
COIN 2	V	18	COIN 1
GND	W	19	GND
	X	20	
	Y	21	
+12V COMMON	Z	22	+12V COMMON
COUNTER 2	a	23	COUNTER 1
SP ⊖	b	24	SP ⊕
+12	c	25	+12
GND (12V)	d	26	GND (12V)
GND	e	27	GND
GND	f	28	GND

- 使用コネクター

CR7E-56DA - 3.96E : (ヒロセ)

or

1168-056 - 009 : (KEL)

TROJAN

闘いの挽歌 デップスイッチ表

Dip Sw.
デップスイッチ A

項目	内容	1	2	3	4	5	6	7	8
コイン Coin	1 コイン / 1 プレイ	OFF	OFF						
	1 コイン / 2 プレイ	ON	OFF						
	1 コイン / 3 プレイ	OFF	ON						
	2 コイン / 1 プレイ	ON	ON						
コイン	1 コイン / 1 プレイ			OFF	OFF				
	2 コイン / 1 プレイ			ON	OFF				
	3 コイン / 1 プレイ			OFF	ON				
	4 コイン / 1 プレイ			ON	ON				
プレイヤー数 players	3 人					OFF	OFF		
	2 人					ON	OFF		
	4 人					OFF	ON		
	5 人					ON	ON		
画面反転 Screen Reverse	不要 (電源 ON 時正常) X								OFF
	必要 (電源 ON 時反転) O								ON
コンテニューモード Continue Mode	必要 O								OFF
	不要 X								ON

Dip Sw.
デップスイッチ B

項目	内容	1	2	3	4	5	6	7	8
ゲーム機のタイプ Table	アップライト 1-lever	ON	ON						
	アップライト 2-levers	ON	OFF						
	テーブルタイプ every	OFF	ON						
ボーナス得点 Bonus Points	30,000 点 その後 60,000 点毎			OFF	OFF	OFF			
	30,000 点 その後 70,000 点毎			ON	OFF	OFF			
	30,000 点 その後 80,000 点毎			OFF	ON	OFF			
	20,000 点 その後 60,000 点毎			ON	ON	OFF			
	20,000 点 その後 70,000 点毎			OFF	OFF	ON			
	20,000 点 その後 80,000 点毎			ON	OFF	ON			
	40,000 点 その後 80,000 点毎 無し			OFF	ON	ON			
ゲームスタート場所 Starting Point	1 バターンからプレイ from Pattern 1						OFF	OFF	OFF
	2 バターンからプレイ "		2				ON	OFF	OFF
	3 バターンからプレイ "						OFF	ON	OFF
	4 バターンからプレイ "						ON	ON	OFF
	5 バターンからプレイ "						OFF	OFF	ON
	6 バターンからプレイ "						ON	OFF	ON

 
※ 太字は出荷時の状態

◎ 設置の概要

- CRT モニター

横画面 *horizontal*

- コントロールパネルの配置

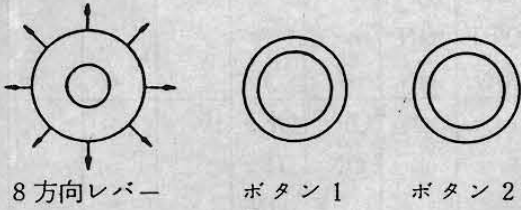

8方向レバー

ボタン1


ボタン2

Button

Button 1 *Sword* *punch*
 ○ ボタン1 剣 (素手の時、パンチ)


○ ボタン2 盾 (素手の時、キック)
Shield *kick*

 - DIP sw の位置

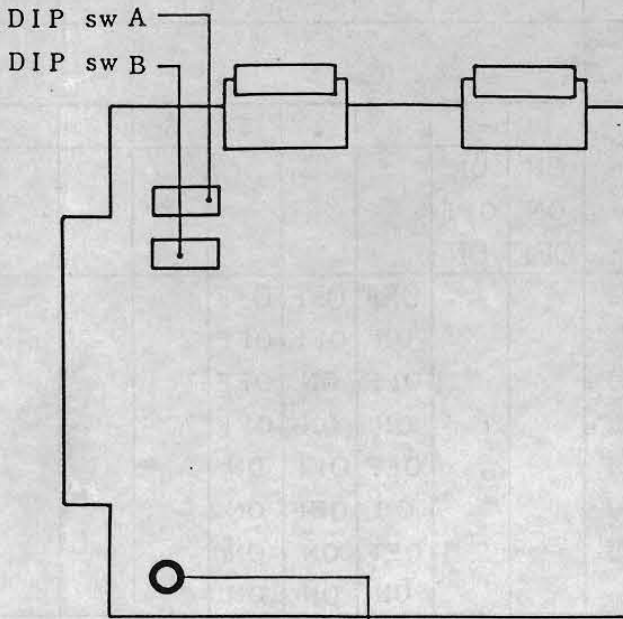

音量調整用ボリューム

 Volume

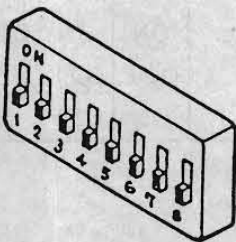

DIP sw

Solder		Parts	
半田面			部品面
GND	A	1	GND
GND	B	2	GND
+5	C	3	+5
+5	D	4	+5
Ⓞ	E	5	Ⓡ
SYNC	F	6	ⓑ
GND	H	7	GND
		J	8
		キーシフト	
SHOT 2	K	9	SHOT 2
SHOT 1	L	10	SHOT 1
UP 1	M	11	UP 1
DOWN 1	N	12	DOWN 1
LEFT 1	P	13	LEFT 1
RIGHT 1	R	14	RIGHT 1
GND	S	15	GND
2P SELECT	T	16	1P SELECT
	U	17	
COIN 2	V	18	COIN 1
GND	W	19	GND
	X	20	
	Y	21	
+12V COMMON	Z	22	+12 COMMON
COUNTER 2	a	23	COUNTER 1
SP ⊖	b	24	SP ⊕
+12	c	25	+12
GND (12V)	d	26	GND (12V)
GND	e	27	GND
GND	f	28	GND

- 使用コネクター

CR7E-56DA-3.96E : (HIROSE)
 or
 1168-056-009 : (KEL)

DIP SW - TROJAN

DIP SW A

DIP

ITEM	DESCRIPTION	1	2	3	4	5	6	7	8
COIN 1	1 COIN/1 CREDIT	OFF	OFF						
	1 COIN/2 CREDITS	ON	OFF						
	1 COIN/3 CREDITS	OFF	ON						
	2 COIN/1 CREDIT	ON	ON						
COIN 2	1 COIN/1 CREDIT	CO		OFF	OFF				
	2 COINS/1 CREDIT			ON	OFF				
	3 COINS/1 CREDIT			OFF	ON				
	4 COINS/1 CREDIT			ON	ON				
NUMBER OF PLAYERS	3 PLAYERS					OFF	OFF		
	2 PLAYERS	NU				ON	OFF		
	4 PLAYERS	PL				OFF	ON		
	5 PLAYERS					ON	ON		
PICTURE REVERSE	NORMAL	PI						OFF	
	REVERSAL	RE						ON	
CONTINUE MODE	YES	CO							OFF
	NO	MO							ON

DIP SW B




DIP

ITEM	DESCRIPTION	1	2	3	4	5	6	7	8
TYPE	UPRIGHT - 1 JOYSTICK	ON	ON						
	UPRIGHT - 2 JOYSTICKS	ON	OFF						
	TABLE	OFF	OFF						
BONUS POINTS	30,000 EVERY 60,000			OFF	OFF	OFF			
	30,000 EVERY 70,000			ON	OFF	OFF			
	30,000 EVERY 80,000			OFF	ON	OFF			
	20,000 EVERY 60,000	BO		ON	ON	OFF			
	20,000 EVERY 70,000	PO		OFF	OFF	ON			
	20,000 EVERY 80,000			ON	OFF	ON			
	40,000 EVERY 80,000			OFF	ON	ON			
NO BONUS			ON	ON	ON				
GAME STARTING PLACE	START FROM 1ST STAGE						OFF	OFF	OFF
	START FROM 2ND STAGE						ON	OFF	OFF
	START FROM 3RD STAGE	GA					OFF	ON	OFF
	START FROM 4TH STAGE	ST					ON	ON	OFF
	START FROM 5TH STAGE	PL					OFF	OFF	ON
	START FROM 6TH STAGE						ON	OFF	ON

WIRING HARNESS - TROJAN

*CRT MONITOR
 *HORIZONTAL SCREEN

   *CONTROL PANEL

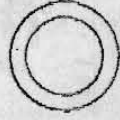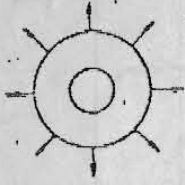

8-WAY LEVER BUTTON 1 BUTTON 2

BUTTON 1 SWORD BUTTON
 BUTTON 2 SHIELD BUTTON

SOLDER SIDE			COMPONENT SIDE	
GND	A	1	GND	
GND	B	2	GND	
+5	C	3	+5	
+5	D	4	+5	
Ⓞ	E	5	Ⓞ	
SYNC	F	6	Ⓞ	
GND	H	7	GND	
		J	8	
		K	9	
2P SHOT 2		L	10	1P SHOT 1
SHOT 1		M	11	UP 1
UP 1		N	12	DOWN 1
DOWN 1		P	13	LEFT 1
LEFT 1		R	14	RIGHT 1
RIGHT 1		S	15	GND
GND		T	16	1P SELECT
2P SELECT		U	17	
		V	18	COIN 1
COIN 2		W	19	GND
GND		X	20	
		Y	21	
+12V COMMON		Z	22	+12V COMMON
COUNTER 2		a	23	COUNTER 1
SP ⊖		b	24	SP ⊕
1#12		c	25	+12
GND (12V)		d	26	GND (12V)
GND		e	27	GND
GND		f	28	GND