

LOTSSEITE

BESTÜCKUNG

*****TUTANKHAMEN*****

| SOLDER FACE | | PARTS FACE | |
|----------------|----|----------------|--|
| -5V | 1 | +12V | |
| SPEAKER OUT | 2 | SPEAKER OUT | |
| 2P SHOOT LEFT | 3 | 2P SHOOT RIGHT | |
| 2P LEFT | 4 | 2P RIGHT | |
| 1P START | 5 | 2P START | |
| 1P SHOOT RIGHT | 6 | 2P UP | |
| 1P SHOOT LEFT | 7 | SERVICE | |
| 1P RIGHT | 8 | 1P LEFT | |
| 1P UP | 9 | 2P DOWN | |
| COIN-1 | 10 | COIN-2 | |
| 1P DOWN | 11 | COIN COUNTER-1 | |
| 1P FLASH | 12 | COIN COUNTER-2 | |
| TV-G | 13 | TV-B | |
| TV-K | 14 | TV-SYNC | |
| | 15 | 2P FLASH | |
| GND | 16 | GND | |
| GND | 17 | GND | |
| +5V | 18 | +5V | |



NOTE: PLEASE ADJUST UNDER 5V. AT THE PART OF HARNESS REGARDING +5V.

DIP 1 SW SET

| SW | 4 | 3 | 2 | 1 | COIN | PLAY |
|---------------|-----|-----|-----|-----|------|------|
| COIN 1 SW WET | OFF | OFF | OFF | OFF | 1 | 1 |
| | OFF | OFF | OFF | OFF | 1 | 2 |
| | ON | ON | ON | OFF | 1 | 3 |
| | ON | ON | ON | ON | 1 | 4 |
| | OFF | ON | OFF | OFF | 1 | 5 |
| | ON | OFF | ON | OFF | 1 | 6 |
| | ON | OFF | ON | OFF | 1 | 7 |
| | ON | OFF | ON | OFF | 2 | 3 |
| | ON | OFF | ON | OFF | 2 | 5 |
| | ON | OFF | ON | OFF | 3 | 1 |
| | ON | OFF | ON | OFF | 3 | 2 |
| | ON | OFF | ON | OFF | 3 | 4 |
| | ON | OFF | ON | OFF | 4 | 1 |
| | ON | OFF | ON | OFF | 4 | 3 |

2) COIN 2 SW SET

| SW | 8 | 7 | 6 | 5 | COIN | PLAY |
|---------------|-----|-----|-----|-----|------|------|
| COIN 2 SW SET | OFF | OFF | OFF | OFF | 1 | 1 |
| | OFF | OFF | OFF | OFF | 1 | 2 |
| | ON | ON | ON | OFF | 1 | 3 |
| | ON | ON | ON | ON | 1 | 4 |
| | OFF | ON | OFF | OFF | 1 | 5 |
| | ON | OFF | ON | ON | 1 | 6 |
| | ON | OFF | ON | OFF | 1 | 7 |
| | ON | OFF | ON | OFF | 2 | 1 |
| | ON | OFF | ON | OFF | 2 | 3 |
| | ON | OFF | ON | OFF | 2 | 5 |
| | ON | OFF | ON | OFF | 3 | 1 |
| | ON | OFF | ON | OFF | 3 | 2 |
| | ON | OFF | ON | OFF | 3 | 4 |
| | ON | OFF | ON | OFF | 4 | 1 |
| | ON | OFF | ON | OFF | 4 | 3 |

DIP 2 SW SET

| SW | 2 | 1 | NUMBER |
|-------------------|-----|-----|--------|
| NUMBERS OF PLAYER | OFF | OFF | 3 |
| | ON | OFF | 4 |
| | OFF | ON | 5 |
| | ON | ON | 256 |

1) NUMBERS OF PLAYER

| SW | 3 | TYPE |
|---------------|-----|----------|
| TABLE/UPLIGHT | OFF | TABLE |
| | ON | UP LIGHT |

2) TABLE/UPLIGHT

| SW | 4 | BONUS POINT |
|-----------|-----|-------------|
| BONUS SET | OFF | 30,000 |
| | ON | 40,000 |

3) BONUS SET

| SW | 6 | 5 | EASY TO HARD |
|-------------|-----|-----|--------------|
| HARDER PLAY | OFF | OFF | 1 (EASY) |
| | ON | OFF | 2 |
| | OFF | ON | 3 |
| | ON | ON | 4 (HARDER) |

4) HARDER PLAY

| SW | 7 | NUMBERS OF FLASH |
|------------------|-----|----------------------------|
| NUMBERS OF FLASH | OFF | ONE PLAYER-ONE FLASH |
| | ON | ONE FLASH/EACH 20,000POINT |

5) NUMBERS OF FLASH

| SW | 8 | DEMO SOUND |
|--------------------|-----|------------|
| ONE GAME-ONE FLASH | OFF | NO SOUND |
| | ON | SOUND |

*FIX USUALY "ON"

Tutan Kahn

Steckerleiste Belegung " S C R A M B L E "

Oberseite

12V DC 1
Lautsprecher Gnd 2
Bombe 2.Spieler 3
rechts 2.Spieler 4
Start 2.Spieler 5
Oben 2.Spieler 6
----- 7
links 1.Spieler 8
Unten 2.Spieler 9
----- 10
----- 11
----- 12
Videoausgang blau 13
" Synchron 14
----- 15
Gnd 16
Gnd Fernsehchassis 17
5V DC 18

Unterseite

Lautsprecher Gnd
Fire 2.Spieler
links 2.Spieler
Start 1.Spieler
Bombe 1.Spieler
Fire 1.Spieler
rechts 1.Spieler
Oben 1.Spieler
Kredit v. Münzplati
Unten 1.Spieler

Videoausgang grün
" rot

Gnd
Gnd
5V DC

Krediteinstellung Münzprüferplatte