

DIP SWITCH SETTINGS

DIP SWITCH 1

SUPER STARS

1	2	3	4	5	6	7	8	
								●Coin-1
OFF	OFF	OFF						1 Coin - 1 Play
ON	OFF	OFF						1 Coin - 2 Plays
OFF	ON	OFF						1 Coin - 3 Plays
ON	ON	OFF						1 Coin - 4 Plays
OFF	OFF	ON						1 Coin - 5 Plays
ON	OFF	ON						2 Coins - 1 Play
OFF	ON	ON						3 Coins - 1 Play
ON	ON	ON						4 Coins - 1 Play
								●Coin-2
			OFF	OFF	OFF			1 Coin - 1 Play
			ON	OFF	OFF			1 Coin - 2 Plays
			OFF	ON	OFF			1 Coin - 3 Plays
			ON	ON	OFF			1 Coin - 4 Plays
			OFF	OFF	ON			1 Coin - 5 Plays
			ON	OFF	ON			2 Coins - 1 Play
			OFF	ON	ON			3 Coins - 1 Play
			ON	ON	ON			4 Coins - 1 Play
								●Screen Invert
							OFF	Normal
							ON	Invert

DIP SWITCH 2

1	2	3	4	5	6	7	8	
								●難度 Degree of Difficulty
OFF	OFF							普通 Normal
OFF	ON							やさしい Easy
ON	OFF							ややむずかしい Not too Easy
ON	ON							むずかしい Difficult
								●Sound for Demonstration
		OFF						可 Sound
		ON						不可 No Sound
								●Super Technique
			OFF					Normal Defense
			ON					Strong Defense
								●ゲームタイマー Game Timer
				OFF	OFF			+ - 0
				ON	OFF			+ 15
				OFF	ON			- 15
				ON	ON			- 30
								●Bonus Power
							OFF	Yes
							ON	No

CONNECTING DIAGRAM

半田面 Solder Side			部品面 Parts Side
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
-5V	E	5	-5V
+12V	F	6	+12V
N/A	H	7	N/A
Coin Counter 2	J	8	Coin Counter 1
N/A	K	9	N/A
Speaker (-)	L	10	Speaker (+)
	M	11	
Video Green	N	12	Video Red
Video Sync	P	13	Video Blue
Service	R	14	Video GND
N/A	S	15	N/A
Coin 2	T	16	Coin 1
2P Start	U	17	1P Start
2P Up	V	18	1P Up
2P Down	W	19	1P Down
2P Left	X	20	1P Left
2P Right	Y	21	1P Right
2P Push S/W 1 (L/Attack)	Z	22	1P Push S/W 1 (L/Attack)
2P Push S/W 2 (Jump)	a	23	1P Push S/W 2 (Jump)
2P Push S/W 3 (R/Attack)	b	24	1P Push S/W 3 (R/Attack)
N/A	c	25	N/A
N/A	d	26	N/A
GND	e	27	GND
GND	f	28	GND

W W F SUPER STARS

SOLDER SIDE		PARTS SIDE									
1	GND	GND	DIP SW 1	1	2	3	4	5	6	7	8
2	GND	GND	COIN 1								
3	+5V	+5V	1coin 1play	OFF	OFF	OFF					
4	+5V	+5V	1coin 2play	ON	OFF	OFF					
5			1coin 3play	OFF	ON	OFF					
6	+12V	+12V	1coin 4play	ON	ON	OFF					
7	POST	POST	2coin 1play	ON	OFF	ON					
8	COIN COUNTER(B)	COIN COUNTER(A)	3coin 1play	OFF	ON	ON					
9			4coin 1play	ON	ON	ON					
10	SPEAKER(-)	SPEAKER(+)	COIN2								
11	VIDEO G	VIDEO R	1coin 1play	OFF			OFF	OFF	OFF		
12	VIDEO SYNC	VIDEO B	1coin 2play	ON			ON	OFF	OFF		
13	SERVICE SW	VIDEO GND	1coin 3play	OFF			OFF	ON	OFF		
14	TILT SW		1coin 4play	ON			ON	ON	OFF		
15	(COIN 2)		1coin 5play	OFF			OFF	OFF	ON		
16	2P SELECT	COIN 1	2coin 1play	ON			ON	OFF	ON		
17	2P UP	1P SELECT	3coin 1play	OFF			OFF	ON	ON		
18	2P DOWN	1P UP	4coin 1play	ON			ON	ON	ON		
19	2P LEFT	1P DOWN	DIP SW 2	1	2	3	4	5	6	7	8
20	2P RIGHT	1P LEFT	DIFFICULTY								
21	2P L/ATTACK	1P RIGHT	NORMAL	OFF	OFF						
22	2P R/ATTACK	1P L/ATTACK	EASY	OFF	ON						
23	2P JUMP	1P JUMP	NOT TOO EASY	ON	OFF						
24	2P R/ATTACK	1P R/ATTACK	DIFFICULT	ON		OFF					
25			DEMO SOUND			OFF					
26	GND	GND	NO DEMO SOUND			ON					
27	GND	GND	NORMAL DEFENSE				OFF				
28	GND	GND	STRONG DEFENSE				ON				
			GAME TIMER +-0					OFF			
			+15					ON			
			-15					ON			
			-30					OFF			
			BONUS POWER					ON			
			NO BONUS POWER					ON			