

WORLD WARS

<u>SOLDER SIDE</u>		<u>PARTS SIDE</u>
GND	1	GND
GND	2	GNDG
+5V	3	+5V
+5V	4	+5V
-5V	5	-5V
+12V	6	+12V
	7	
COIN COUNTER 2	8	COIN COUNTER 1
	9	
SPEAKER (-)	10	SPEAKER (+)
	11	
TV GREEN	12	TV RED
TV SYNC	13	TV BLUE
SERVICE SWITCH	14	TV GND
TILT SWITCH	15	TEST SWITCH
COIN SWITCH 2	16	COIN SWITCH 1
START SWITCH 2	17	START SWITCH 1
2P CONTROL 1 UP	18	1P CONTROL 1 UP
2P CONTROL 2 DOWN	19	1P CONTROL 2 DOWN
2P CONTROL 3 LEFT	20	1P CONTROL 3 LEFT
2P CONTROL 4 RIGHT	21	1P CONTROL 4 RIGHT
2P CONTROL 5 PUSH1	22	1P CONTROL 5 PUSH1
2P CONTROL 6 PUSH2	23	1P CONTROL 6 PUSH2
	24	
	25	
	26	
GND	27	GND
GND	28	GND

DIP SW No. 1

	1	2	3	4	5	6	7	8
GAME MODE								
CONTINUE	ON							
NORMAL	OFF							
SCREEN REVERSE		ON						
'' NORMAL		OFF						
BONUS POINT								
EVERY BONUS				OFF				
SECOND BONUS				ON				
NUMBER OF PLAYER 3				OFF				
'' 5				ON				
PLAY CHARGE (COIN 1)								
1coin 1credit						OFF	OFF	
2coin 1credit						ON	OFF	
3coin 1credit						OFF	ON	
4coin 1credit						ON	ON	
COIN CHARGE (COIN 2)								
1coin 6credit							OFF	OFF
1coin 4credit							ON	OFF
1coin 3credit							OFF	ON
1coin 2credit							ON	ON

DIP SW No. 2

	1	2	3	4	5	6	7	8
DIFFICULTY 1	OFF	OFF						
2	ON	OFF						
3	OFF	ON						
Difficult 4	ON	ON						
DEMO SOUND				ON	OFF			
NO SOUND				OFF	OFF			
NEVER FINISH				OFF	ON			
SCREEN STOP				ON	ON			
BONUS POINT 1st/2nd								
50,000/100,000						OFF	OFF	
80,000/160,000						ON	OFF	
100,000/200,000						OFF	ON	
NO BONUS						ON	ON	

