

XX-MISSION

86/12/08

20

=====

WIRING DIAGRAM

SOLDER SIDE		PART SIDE
GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
	5	
+12V	6	+12V
	7	
	8	
	9	
SPEAKER (-)	10	SPEAKER (+)
	11	
GREEN	12	RED
SYNC	13	BLUE
	14	
	15	
COIN	16	
2P START	17	2P START
2P UP	18	1P UP
2P DOWN	19	1P DOWN
2P LEFT	20	1P LET
2P RIGHT	21	1P RIGHT
2P SHOOT (1)	22	1P SHOOT (1)
2P SHOOT (2)	23	1P SHOOT (2)
	24	
	25	
	26	
GND	27	GND
GND	28	GND

DIP SW 1	1	2	3	4	5	6	7	8
=====								
1COIN 1PLAY	OFF	OFF						
2COIN 1PLAY	ON	OF						
1COIN 2PLAY	OFF	ON						
3COIN 1PLAY	ON	ON						
DEMO SOUND								
SOUND					OFF			
NO SOUND					ON			
GAME LEVEL								
EASY					OFF			
DIFFICULTY					ON			
TYPE								
TABLE						OFF		
UPRIGHT						ON		

AV

XX MISSION

By UPL Company Limited.

DIP SWITCH		1	2	3	4	5	6	7	8
COIN CREDIT	1COIN 1CREDIT	OFF	OFF						
	1COIN 2CREDIT	OFF	ON						
	2COIN 1CREDIT	ON	OFF						
	3COIN 1CREDIT	ON	ON						
FLIP				ON					
				OFF					
DEMO SOUND	WITH SOUND				ON				
	NO SOUND				OFF				
GAME LEVEL	NORMAL					OFF			
	DIFFICULT					ON			
GAME STYLE	TAELE TYPE						OFF		
	UPRIGHT TYPE						ON		

* Dip SW No2 - not used.

端子番号	部番	説明
A 1	GND	GND
B 2	GND	GND
C 3	+5V	+5V
D 4	+5V	+5V
E 5	-5V	-5V
F 6	+12V	+12V
G 7		
H 8		
I 9		
J 10	スローク SP(+)	スローク SP(-)
K 11		スタート (GND)
L 12	スローク RED	スローク GREEN
M 13	スローク BLUE	スローク SYNC
N 14		
O 15		
P 16		スタート Coin
Q 17		スタート コイン 2
R 18	1Pソルト 1 UP	2Pソルト 1 UP
S 19	1Pソルト 2 DOWN	2Pソルト 2 DOWN
T 20	1Pソルト 3 LEFT	2Pソルト 3 LEFT
U 21	1Pソルト 4 RIGHT	2Pソルト 4 RIGHT
V 22	1Pソルト 5 PUSH1	2Pソルト 5 PUSH1
W 23	1Pソルト 6 PUSH2	2Pソルト 6 PUSH2
X 24		
Y 25		
Z 26		
aa 27	GND	GND
ab 28	GND	GND

Handwritten signature

XX MISSION