

X E V I O U S

Parts Side	Solder side	DIP SW	1	2	3	4	5	6	7	8
GND	GND	1 coin 1 credit	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SPEAKER	SPEAKER	1 coin 2 credit	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
LOCKOUT SOLENOID	COIN COUNTER 1	2 coin 1 credit	ON	ON	ON	ON	ON	ON	ON	ON
2P START LAMP	1P START LAMP	2 coin 3 credit	ON	ON	ON	ON	ON	ON	ON	ON
+12V	+12V	1st 20000/every	60000	60000	60000	60000	60000	60000	60000	60000
+5V	+5V	" 10000/"	40000	40000	40000	40000	40000	40000	40000	40000
+5V	+5V	" 10000/"	50000	50000	50000	50000	50000	50000	50000	50000
TEST SW	SERVICE SW	" 20000/"	50000	50000	50000	50000	50000	50000	50000	50000
	COIN	" 20000/"	70000	70000	70000	70000	70000	70000	70000	70000
2P START	1P START	" 20000/"	80000	80000	80000	80000	80000	80000	80000	80000
2P SHOT 1	1P SHOT 1	" 20000/ 2nd	60000	60000	60000	60000	60000	60000	60000	60000
2P LEFT	1P SHOT 1	No Bonus								
2P DOWN	1P SHOT 1	" 20000/every	70000	70000	70000	70000	70000	70000	70000	70000
2P RIGHT	1P SHOT 1	" 10000/"	50000	50000	50000	50000	50000	50000	50000	50000
2P UP	1P SHOT 1	" 20000/"	50000	50000	50000	50000	50000	50000	50000	50000
	1P SHOT 2	" 20000/"	60000	60000	60000	60000	60000	60000	60000	60000
	1P SHOT 2	" 20000/"	80000	80000	80000	80000	80000	80000	80000	80000
	1P SHOT 2	" 30000/"	100000	100000	100000	100000	100000	100000	100000	100000
	1P SHOT 2	" 20000/ 2nd	60000	60000	60000	60000	60000	60000	60000	60000
* GND	COIN COUNTER 2	1 Fighter	ON	OFF	ON	OFF	ON	OFF	ON	OFF
GND	GND	2 Fighter	OFF	ON	OFF	ON	OFF	ON	OFF	ON
		3 Fighter	OFF	OFF	ON	OFF	ON	OFF	ON	OFF
		5 Fighter	ON	ON	ON	ON	ON	ON	ON	ON

-----CAUTION-----

* Please use the power supply (Switching Regulator) which supplies more than 5 Volt 7 Ampair for this P.C. Board.

* Please adjust voltage from 4.9 Volt to 5.5 Volt on P.C. Board

* When the colour on the Screen isn't normal, please adjust the colour with Monitor R.G.B. Gain.

Dip SW取扱説明

REV.005

Dip SW I (9丁)

8 6 4 2 7 5 6 1

ゲーム料金 (コイン1)	1 コイン 1クレジット	off	off						
	1 " 2 "	on	off						
	2 " 1 "	off	on						
	2 " 3 "	on	on						
ボ ー ド ス 得 点	1~3枚仕切 5枚仕切								
	1st & every 2万点 5万点	1st & every 2万点 4万点			off	off	off		
	1st & every 1万点 4万点	1st & every 1万点 5万点			on	off	off		
	1st & every 1万点 5万点	1st & every 2万点 5万点			off	on	off		
	1st & every 2万点 5万点	1st & every 2万点 6万点			on	on	off		
	1st & every 2万点 4万点	1st & every 2万点 8万点			off	off	on		
	1st & every 2万点 8万点	1st & every 3万点 10万点			on	off	on		
	1st & 2nd 2万点 6万点	1st & 2nd 2万点 8万点			off	on	on		
	ナシ			on	on	on			
レベル調整	3 枚						off	off	
	1 枚						on	off	
	2 枚						off	on	
	5 枚						on	on	
									off

Dip SW II (11丁)

1 6 7 2 5 4 3 8

ゲーム料金 (コイン2)	1 コイン 1クレジット	off	off			off	off	off	
	1 " 2 "	on	off						
	2 " 1 "	off	on						
	2 " 3 "	on	on						
画面停止	ノーモリ								off
	画面停止								on