

# CAUTION

The System 24 Game Disk (Floppy Disk) is not inserted in the Floppy Disk Unit at the time of shipping.

Before turning the power ON, make sure that the disk is inserted in the unit. The Floppy Disk is contained in the Cashbox.

