

ADJUSTMENTS ON GAME PC BOARD (BEN BERO BEH G25 00319A)

H


1	GND
2	GND
3	GND
4	GND
5	+5V
6	+5V
7	+5V
8	-5V
9	+13V
10	POST
11	+12V
12	+12V

T

COMPONENTS	SOLDER
GND	1 A GND
GND	2 B GND
GND	3 C GND
GND	4 D GND
V-GND	5 E V-GND
V-SYNC	6 F V-SYNC
POST	7 H POST
VIDEO R	8 J VIDEO R
VIDEO G	9 K VIDEO G
VIDEO BL	10 L VIDEO BL
-5V	11 M -5V
-5V	12 N -5V
+12V	13 P +12V
+12V	14 R +12V
+5V	15 S +5V
+5V	16 T +5V
+5V	17 U +5V
+5V	18 V +5V

G CONNECTOR

COMPONENTS SIDE	SOLDER SIDE
GND	1 A GND
	2 B
	3 C
	4 D
SOUND OUT (+)	5 E SOUND OUT (-)
POST	6 F POST
	7 H P-ON-RESET
COIN SW (A)	8 J COIN SW (B)
COIN METER(A)	9 K COIN METER(B)
COIN LOCKOUT(A)	10 L COIN LOCKOUT(B)
SERVICE SW	11 M TILT SW
SERECT-1	12 N SERECT-2
1P UP	13 P 2P UP
1P DOWN	14 R 2P DOWN
1P RIGHT	15 S 2P RIGHT
1P LEFT	16 T 2P LEFT
	17 U
	18 V
	19 W
	20 X
1P FIRE (EXTINGUISHING)	21 Y 2P FIRE (EXTINGUISHING)
1P WARP (JUMP)	22 Z 2P WARP (JUMP)

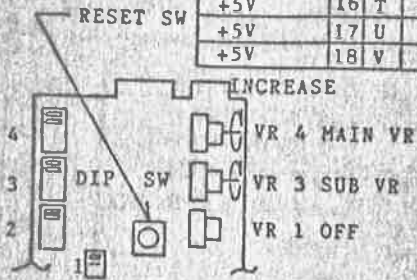

NOTE) BEFORE CHANGING THE SETTINGS OF THE DIP SWITCH, TURN THE POWER SWITCH OFF.

DIP SW 1 (*):FACTORY SETTING

SETTING	POSITION	1 ~ 5	6
COIN SYSTEM	* 1 WAY	OFF	ON
	2 WAY	OFF	OFF

(*):FACTORY SETTINGS

DIP SW 2 (*):FACTORY SETTINGS

SETTING	POSITION	1	2	3	4	5	6	7	8
ROUND START	2 ROUND	ON							
	* 1 ROUND	OFF							
CONTROL	* BUTTONS		ON						
	REVOLVER		OFF						
TIME UNTIL THE GIRL FALLS (BONUS)	1 : 15			ON	ON				
	1 : 30			OFF	ON				
	* 1 : 45			ON	OFF				
	2 : 00			OFF	OFF				
COIN DISPLAY	NO DISPLAY					ON			
	* DISPLAY					OFF			
YEAR DISPLAY	NO DISPLAY						ON		
	* DISPLAY						OFF		
HIT DETECTION	NO HIT							ON	
	* NORMAL GAME							OFF	
MAXIMUM NUMBER OF CREDITS	16								ON
	* 9								OFF

DIP SW 3 (*):FACTORY SETTING

SETTING	POSITION	1 WAY (LEFT)				2 WAY (RIGHT)			
		1	2	3	4	5	6	7	8
PLAY PRICING	* 1 COIN 1 PLAY	ON				ON			
	1 COIN 2 PLAYS	OFF	ON			OFF	ON		ON
	1 COIN 3 PLAYS		OFF	ON		ON	OFF	ON	
	2 COINS 1 PLAY	ON			OFF	ON			OFF

DIP SW 4 (*):FACTORY SETTINGS

SETTING	POSITION	1	2	3	4	5	6	7	8
ADDITIONAL PLAYER	100,000/200,000 PTS.	ON	ON						
	* EVERY 100,000 PTS.	ON	OFF						
	150,000/300,000 PTS.	OFF	ON						
	EVERY 100,000/300,000/200,000 PTS.	OFF	OFF						
FREE PLAY	FREE PLAY			ON					
	* NORMAL GAME			OFF					
NUMBER OF PLAYER	* NO LIMIT				ON	ON	OFF		
	3				OFF	ON			
	4				ON	OFF			
	5				OFF	OFF			
SCREEN INVERSION							ON		
							OFF		
GAME STYLE	UPRIGHT							ON	
	TABLE							OFF	

5 THIS GAME USES 4-DIRECTIONS, LEVER 2 BUTTONS.