
SEIGER UMBAU 28.12 y2




OPERATION of DIP SWITCH

WIRING AND CONNECTION

内	容	Α	В	С	D	E	F	G	Н
The number of Junior									
3		OFF	OFF						
4		ON	OFF			i I			
5		OFF	ON						
6		ON	ON				İ		
Extra Score									
10),000 P			OFF	OFF				
15	5,000 P		1	ON	OFF				
20),000 P			OFF	ON				
25	5,000 P			ON	ON				
Charge									
1 coin	1 credit					OFF	OFF	OFF	
1 coin	2credits					OFF	ON	OFF	
1 coin	3credits					OFF	OFF	ON	
1 coin	4credits					OFF	ON	ON	
2coins	1 credit					ON	OFF	OFF	
3coins -	1 credit					ON	ON	OFF	
4coins	1 credit					ON	OFF	ON	
5coins	1 credit					ON	ON	ON	
Type									
Ċocktall									OFF
Up-Right									ON

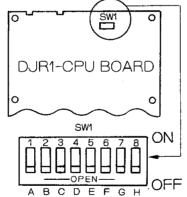

Adjustment of Half-fixed resistance



	Specification		Containts of adjustment			
VR1	50KΩ Up-right type	0.3W White knob	Adjustment of H-screen's location	Ownward		
VR2	50KΩ Up-right type	0.3W White knob	Adjustment of V-screen's location	() Leftward		

44P Edge-connector Harness

1	CND			
	GND			
2	GND			
- B	GND			
3	+5∨			
C	+5∨			
4	+5V			
D	+5V			
5	+12V			
E	+12V			
6	_5V			
F	<u>−5</u> ∨			
7				
Н	COIN			
8	2PLAYER			
J	1PLAYER			
9	SUB RIGHT			
K	MAIN RIGHT			
10	SUB LEFT			
L	MAIN LEFT			
11	SUB UP			
М	MAIN UP			
12	SUB DOWN			
N	MAIN DOWN			
13	SUB JUMP			
Р	MAIN JUMP			
14				
R				
15				
S	SERVICE			
16	GND			
T	GND			
17	TVG			
U	TVR			
18	SYNC			
V	TVB			
19	AUDIO			
W				
20				
Х				
21	GND			
Y	GND			
- 22	GND			
Z	GND			
·				