

Exciting Hour
Exciting Hour

WIRING [REDACTED]


AA: FOR CONNECTOR

SOLDER FACE

-5V	A	1
SOUND OUT (-)	B	2
1 P BUTTON-(TRICK-SMALL)	C	3
1 P RIGHT	D	4
SELECT -1	E	5
2 P BUTTON-(TRICK-SMALL)	F	6
2 P DOWN	G	7
2 P LEFT	H	8
(COIN COUNTER 1)	J	9
(COIN 2)	L	10
	M	11
1 P BUTTON-(TRICK- BIG)	N	12
VIDEO GREEN	P	13
VIDEO RED	R	14
	S	15
GRD	T	16
GND	U	17
+5 V	V	18

PARTS FACE

+12V
SOUND OUT (+)
1 P UP
1 P LEFT
SELLECT -2
2 P UP
2 P RIGHT
1 P DOWN
COIN 1
2 P BUTTON-(TRICK-BIG)
VIDEO BLUE
VIDEO SYNC
GND
GND
+5 V

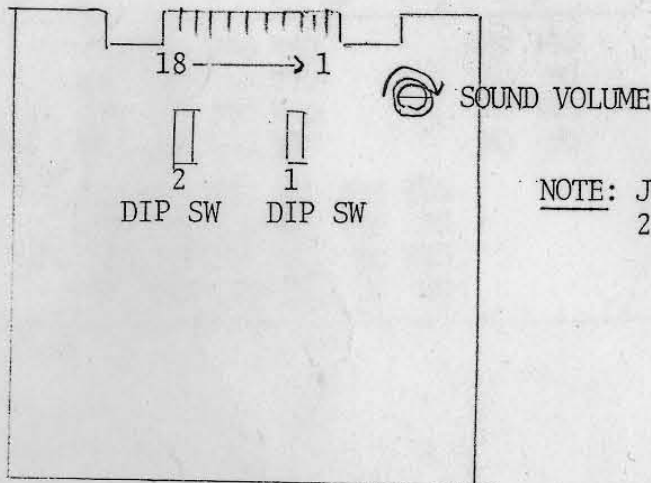

NOTE: JOYSTICK MUST BE 8 WAY. AND
2 PUSH BUTTONS.

Exiting Hour (Bosconien)

BB: DIP SWITCH

DIP SW 1.

			1	2	3	4	5	6	7	8
PLAY FEE COIN 2	1 COIN	1 PLAY	OFF	OFF						ON
	1 COIN	2 PLAY	ON	OFF						ON
	1 COIN	3 PLAY	OFF	ON						ON
	2 COIN	1 PLAY	ON	ON						ON
PLAY FEE COIN 1	1 COIN	1 PLAY				OFF	OFF			ON
	1 COIN	2 PLAY				ON	OFF			ON
	1 COIN	3 PLAY				OFF	ON			ON
	2 COIN	1 PLAY				ON	ON			ON
SOUND	SOUND							OFF		ON
	NO SOUND							ON		ON
GAME STYLE	TABLE							OFF		ON
	UPRIGHT							ON		ON
TEST MODE	NORMAL PLAY								OFF	ON
	TEST MODE								ON	ON

DIP SW 2.

			1	2	3	4	5	6	7	8
DIFFICULTY	NORMAL		OFF	OFF			OFF	OFF	OFF	OFF
	DIFFICULT		ON	OFF			OFF	OFF	OFF	OFF
	MORE DIFFICULT		OFF	ON			OFF	OFF	OFF	OFF
	THE MOST DIFFICULT		ON	ON			OFF	OFF	OFF	OFF
ADJUSTMENT FOR PLAY TIME	TIME : APRX. 2'36"					OFF	OFF	OFF	OFF	OFF
	TIME : APRX. 2'30"					ON	OFF	OFF	OFF	OFF
	TIME : APRX. 2'24"					OFF	ON	OFF	OFF	OFF
	TIME : APRX. 2'12"					ON	ON	OFF	OFF	OFF