


KARIAN CROSS(카리안 크로스)


SWITCH SETTING (DIP SW 1)

| OPTION | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|------------------------------|--------------------|-----|-----|-----|-----|-----|-----|-----|-----|
| COIN SW 코인스위치 | 1 COIN 1 CREDIT | OFF | OFF | OFF | | | | | |
| | 1 COIN 2 CREDIT | OFF | OFF | ON | | | | | |
| | 1 COIN 3 CREDIT | OFF | ON | OFF | | | | | |
| | 2 COIN 1 CREDIT | OFF | ON | ON | | | | | |
| | 2 COIN 3 CREDIT | ON | OFF | OFF | | | | | |
| | 3 COIN 1 CREDIT | ON | OFF | ON | | | | | |
| | 3 COIN 2 CREDIT | ON | ON | OFF | | | | | |
| | FREE PLAY | ON | ON | ON | | | | | |
| DIFFICULTY 난이도 | NORMAL | | | | OFF | OFF | | | |
| | VERY EASY | | | | OFF | ON | | | |
| | EASY | | | | ON | OFF | | | |
| | HARD | | | | ON | ON | | | |
| ATTRACT SOUND 테모시 배경음악 | YES | | | | | | ON | | |
| | NO | | | | | | OFF | | |
| 미사용 (NOT USED) | | | | | | | | | |
| TEST MODE | ON | | | | | | | | ON |
| | OFF | | | | | | | | OFF |
| FACTORY DEFAULT 출하시 기본 세팅 | | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF |

MAIN BOARD

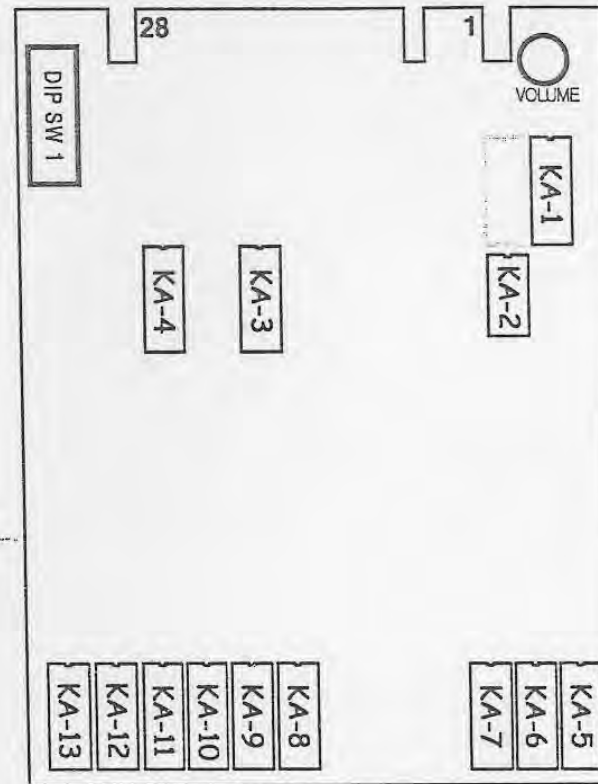

JOYSTICK CONTROL DIRECTION

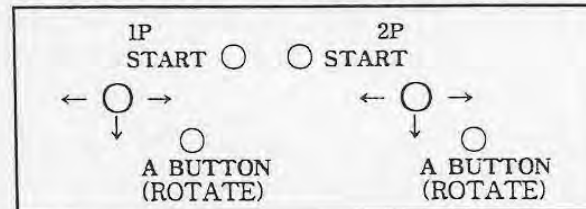

MONITOR TYPE : HORIZONTAL

PIN ASSIGNMENT

| COMONENT SIDE | | SOLDER SIDE | |
|---------------|------|-------------|--|
| GND | 1 A | GND | |
| GND | 2 B | GND | |
| +5V | 3 C | +5V | |
| +5V | 4 D | +5V | |
| | 5 E | | |
| +12V | 6 F | +12V | |
| | 7 H | | |
| COIN METER | 8 J | | |
| | 9 K | | |
| SPEAKER(+) | 10 L | SPEAKER(-) | |
| | 11 M | | |
| RED | 12 N | GREEN | |
| BLUE | 13 P | SYNC | |
| GND | 14 R | SERVICE | |
| TEST | 15 S | | |
| COIN1 | 16 T | | |
| 1P START | 17 U | 2P START | |
| 1P UP | 18 V | 2P UP | |
| 1P DOWN | 19 W | 2P DOWN | |
| 1P LEFT | 20 X | 2P LEFT | |
| 1P RIGHT | 21 Y | 2P RIGHT | |
| 1P SW Ⓐ | 22 Z | 2P SW Ⓐ | |
| 1P SW Ⓑ | 23 a | 2P SW Ⓑ | |
| 1P SW Ⓒ | 24 b | 2P SW Ⓒ | |
| | 25 c | | |
| | 26 d | | |
| GND | 27 e | GND | |
| GND | 28 f | GND | |



DENIAM CORP. 393-2 SHINDANG 2DONG CHUNGKU SEOUL KOREA
TEL:(02)253-0333 FAX:(02)253-0334