


ADJUSTMENTS OF PC BOARD (METAL BLACK G25 00673A)

G-CONNECTOR

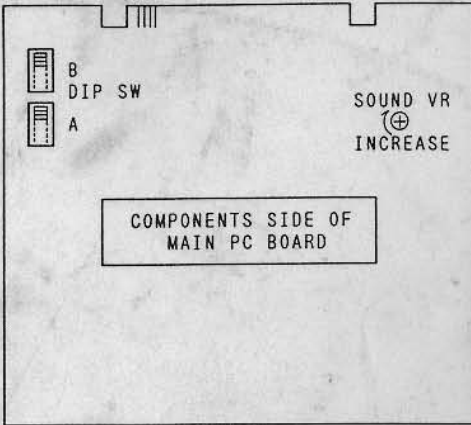

SOLDER SIDE		COMPONENTS SIDE	
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
-5V	E	5	-5V
+12V	F	6	+12V
POST	H	7	POST
COIN METER 2	J	8	COIN METER 1
COIN LOCKOUT 2	K	9	COIN LOCKOUT 1
SPEAKER (-)	L	10	SPEAKER (+)
SOUND GND	M	11	SOUND
VIDEO G	N	12	VIDEO R
VIDEO SYNC	P	13	VIDEO B
SERVICE SW	R	14	VIDEO GND
TILT SW	S	15	
COIN 2	T	16	COIN 1
2P SELECT	U	17	1P SELECT
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P A-BUTTON	Z	22	1P A-BUTTON
2P B-BUTTON	a	23	1P B-BUTTON
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

☆ CONTROL OF THIS GAME USES ONE 8-WAY JOYSTICK AND TWO BUTTONS.

NOTE) BEFORE CHANGING THE SETTING OF DIP SWITCH, TURN THE POWER OFF.

◇ SETTING OF DIP SWITCH A

(*):FACTORY SETTING

SETTINGS		POSITIONS		1	2	3	4	5	6	7	8
SCREEN RATION	* NORMAL	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	REVERSE		ON								
TEST MODE	* NORMAL GAME		OFF								
	TEST MODE		ON								
ATTRACT SOUND	* WITH	OFF									
	WITHOUT	ON									
FOR NORTH AMERICA			EXCEPT NORTH AMERICA								
PLAY PRICING	* 1 COIN 1 PLAY	PLAY PRICING COIN A	* 1 COIN 1 PLAY	OFF	OFF	ON	ON	ON	ON	OFF	OFF
	2 COINS 1 PLAY		ON								
	3 COINS 1 PLAY		OFF								
	4 COINS 1 PLAY		ON								
BUY-IN PLAY PRICING	* 1 COIN 2 PLAYS	PLAY PRICING COIN B	* 1 COIN 2 PLAYS	OFF	OFF	ON	ON	ON	ON	OFF	OFF
	1 COIN 3 PLAYS		ON								
	1 COIN 4 PLAYS		OFF								
	1 COIN 6 PLAYS		ON								

THIS SETTING SHOULD BE THE SAME SETTING AS THAT OF "PLAY PRICING".

◇ SETTING OF DIP SWITCH B

SETTINGS		POSITIONS		1	2	3	4	5	6	7	8	
GAME DIFFICULTY EASY(A) → DIFFICULT(D)	* RANK B	OFF	OFF	ON	ON	ON	ON	ON	ON	ON	ON	
	RANK A		ON									
	RANK C		OFF									
	RANK D		ON									
BONUS EXTEND (1 UP) K=1,000PTS.	* 70K/220K/370K/520K/670K/820K....	OFF	OFF	ON	ON	ON	ON	ON	ON	ON	ON	
	50K/170K/290K/410K/530K/650K....		ON									
	80K/240K/400K/560K/720K/880K....		OFF									
	100K/300K/500K/700K/900K/1100K...		ON									
NUMBER OF PLAYER(S)	* 3	OFF	ON	ON	ON	ON	ON	ON	ON	ON	ON	
	4											ON
	2											OFF
	1											ON
CONTINUE MODE	* WITH	OFF	ON	ON	ON	ON	ON	ON	ON	OFF	ON	
	WITHOUT											ON
GAME TYPE	* DOUBLE CONTROL PANEL	OFF	ON	ON	ON	ON	ON	ON	ON	OFF	ON	
	SINGLE CONTROL PANEL											(ONLY 1P)