

CONNECTOR

Padel Mania

SUB CONNECTOR (14 PIN)



Paddle Mania 2

SOLDER SIDE	PIN NO.		PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+ 5V	C	3	+ 5V
+ 5V	D	4	+ 5V
	E	5	
+ 12V	F	6	+ 12V
IN-CORRECT INSERT PREVENTING KEY	H	7	IN-CORRECT INSERT PREVENTING KEY
COIN COUNTER 2	J	8	COIN COUNTER 1
	K	9	
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SWITCH	R	14	VIDEO GND
	S	15	TEST SWITCH
COIN SWITCH 2	T	16	COIN SWITCH 1
START	U	17	START
2P 1 UP	V	18	1P 1 UP
2P 2 DOWN	W	19	1P 2 DOWN
2P 3 LEFT	X	20	1P 3 LEFT
2P 4 RIGHT	Y	21	1P 4 RIGHT
2P 5 LEFT SWING	Z	22	1P 5 LEFT SWING
2P 6 RIGHT SWING	a	23	1P 6 RIGHT SWING
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

No	PIN NAME	COLOR
1	3P UP	BROWN
2	3P DOWN	RED
3	3P LEFT	ORANGE
4	3P RIGHT	YELLOW
5	3P LEFT SWING	GREEN
6	3P RIGHT SWING	BLUE
7	G N D	BLACK
8	4P UP	WHITE/BROWN
9	4P DOWN	WHITE/RED
10	4P LEFT	WHITE/ORANGE
11	4P RIGHT	WHITE/YELLOW
12	4P LEFT SWING	WHITE/GREEN
13	4P RIGHT SWING	WHITE/BLUE
14	G N D	BLACK

PCB (Sub-Connector is to be used only for 4-player.)

SUB-CONNECTOR

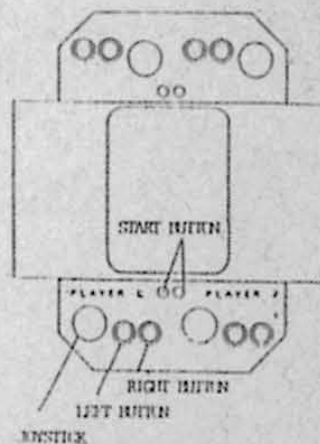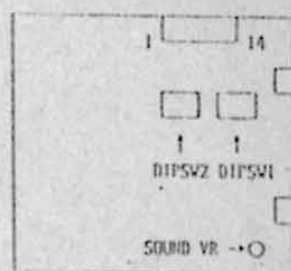

DIP SWITCH SETTING

DIP SWITCH NO. 1

ITEM	SPECIFICATION	1	2	3	4	5	6	7	8
UPRIGHT STYLE	a TYPE	OFF	OFF						
	b TYPE	ON							
TABLE STYLE	c TYPE	OFF	ON						
	d TYPE	ON							
TIME SETTING	A			OFF	OFF				
	B			ON					
	C			OFF	ON				
	D			ON					
PLAY PRICING COIN 1	1 COIN 1 PLAY					OFF	OFF		
	2 COIN 1 PLAY					ON			
	3 COIN 1 PLAY					OFF	ON		
	4 COIN 1 PLAY					ON			
PLAY PRICING COIN 2	1 COIN 6 PLAY							OFF	OFF
	1 COIN 4 PLAY							ON	
	1 COIN 3 PLAY							OFF	ON
	1 COIN 2 PLAY							ON	

DIP SWITCH NO. 2

ITEM	SPECIFICATION	1	2	3	4	5	6	7	8			
GAME PLAY	CONTINUEUS PLAY	OFF	ON									
	NO CONTINUEUS PLAY	ON										
ATTRACTION SOUND	WITH									OFF	OFF	
	WITHOUT									ON		
MODE	NEVER FINISH GAME PLAY			OFF	ON							
MODE	STOP VIDEO DISPLAY			ON								
TEST MODE	WITHOUT							OFF				
	WITH							ON				

TIME SETTING

	(A) (1P VS COMPUTER)	(B) (2P VS COMPUTER)	(C) (1P VS 1P)	(D) (2P VS 1P)	(E) (2P VS 2P)
A	1 : 00	1 : 10	2 : 00	2 : 30	3 : 00
B	1 : 10	1 : 20	2 : 10	2 : 40	3 : 10
C	1 : 20	1 : 30	2 : 20	2 : 50	3 : 20
D	1 : 30	1 : 40	2 : 30	3 : 00	3 : 30