

## SHOOT OUT


<u>PARTS SIDE</u>		<u>SOLDER SIDE</u>
1P DOWN	1	2P DOWN
1P UP	2	2P UP
1P LEFT	3	2P LEFT
1P RIGHT	4	2P RIGHT
	5	
	6	
	7	
SERVICE	8	
1P SHOOT 1	9	2P SHOOT 1
1P SHOOT 2	10	2P SHOOT 2
1P GAME SELECT	11	2P GAME SELECT
COIN 1	12	COIN 2
COIN COUNTER 1	13	COIN COUNTER 2
TV BLUE	14	TV GREEN
SYNC	15	TV RED
	16	
SPEAKER +	17	SPEAKER -
+12V	18	
+5V	19	+5V
+5V	20	+5V
TV GND	21	GND
GND	22	GND

### DIP SW 1


	1	2	3	4	5	6	7	8
GAME CHARGE -RIGHT SELECTOR (TABLE, UPRIGHT)								
1coin 1credit	OFF	OFF			Always OFF			Always OFF
1coin 2credit	ON	OFF						
1coin 3credit	OFF	ON						
2coin 1credit	ON	ON						
GAME CHARGE -LEFT SELECTOR (UPRIGHT)								
1coin 1credit			OFF	OFF				
1coin 2credit			ON	OFF				
1coin 3credit			OFF	ON				
2coin 1credit			ON	ON				
DON'T CHANGE								
DATA EST CORP USA INC.						OFF		
TABLE UPRIGHT						ON		
UPRIGHT							OFF	
DON'T CHANGE							ON	

### DIP SW 2


	1	2	3	4	5	6	7	8
NUMBER OF PLAYER								
3	OFF	OFF						
5	ON	OFF						
1	OFF	ON						
ENDRESS	ON	ON						
20,000 every 50,000 (BONUS POINT)			OFF	OFF				
30,000 every 60,000			ON	OFF				
50,000 every 70,000			OFF	ON				
70,000 every 0			ON	ON				
DIFFICULTY DIFFICULT					ON	ON		
" "					OFF	ON		
" "					ON	OFF		
" "					OFF	OFF		

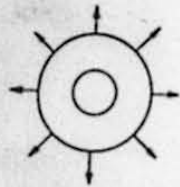

8 WAY LEVER

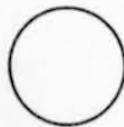

SHOOT 2

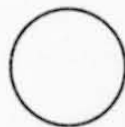

SHOOT 1

↓  
EASY