

STRIKERS 1945

©1995 PSIKYO

TM

ストライカーズ1945



取扱説明書

OPERATOR'S MANUAL

彩京 AMUSEMENT WORKS
PSIKYO

HOW TO PLAY

- 8方向レバー+2ボタン操作。
 - ボタンはショットとボムに対応。
 - 全8ステージ構成。
 - 2人同時プレイおよび途中参加可能。
 - パワーアップは4段階で、1段階ごとに護衛機が1機装備(最大4機)されます。
 - 護衛機がついている時にショットボタンによる溜め撃ちで各機ことなったフォーメーション攻撃ができます。
- 8 direction levers + 2 buttons
 - A button reacts for both "shooting" and "bombing"
 - A total of 8 composition stages
 - 2 player can play together. One can join in the middle of the game, too.
 - Power increases in 4 steps. At each step, 1 relief fighter is added (max. 4 relief fighters)
 - When relief fighters are added, different attack formations for each fighter can be operated with the hold-shoot function on the Shot Button.

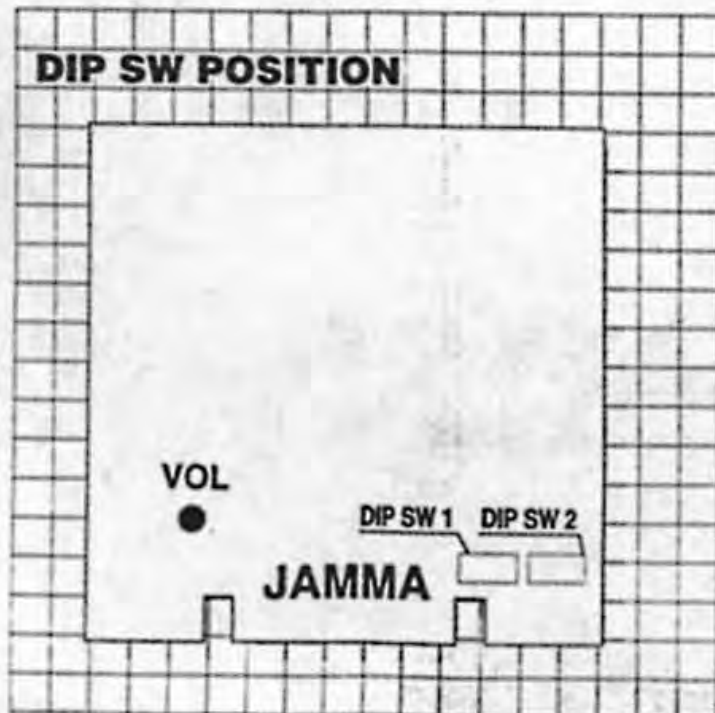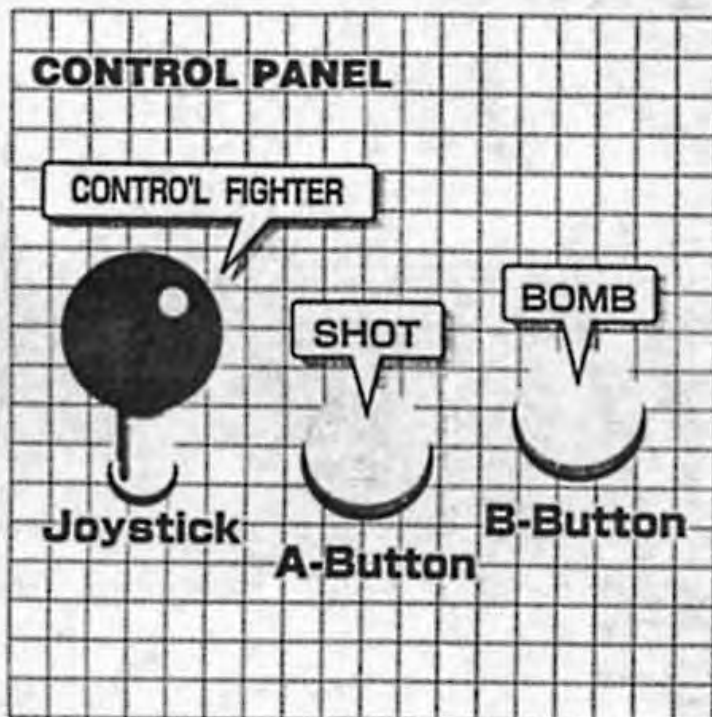

CONNECTOR DIAGRAM

SOLDER SIDE	NO.	NO.	PARTS SIDE
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
	H	7	
COIN COUNTER 2	J	8	COIN COUNTER 1
	K	9	
SP (-)	L	10	SP (+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	
COIN SW 2	T	16	COIN SW 1
2P START	U	17	1P START
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P SW 1 BUTTON	Z	22	1P SW 1 BUTTON
2P SW 2 BUTTON	a	23	1P SW 2 BUTTON
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

Power Supply	DC5V DC12V
Monitor	Vertical Screen
Game Style	Simultaneous play by 2 players

DIP SWITCH [1]

Coin Slot	SAME INDIVIDUAL	1	2	3	4	5	6	7	8
		OFF*							
Coin 1	1 COIN = 1 CREDIT		OFF*	OFF*	OFF*				
	2 COINS = 1 CREDIT		ON	OFF	OFF				
	3 COINS = 1 CREDIT		OFF	ON	OFF				
	1 COIN = 2 CREDITS		ON	ON	OFF				
	1 COIN = 3 CREDITS		OFF	OFF	ON				
	1 COIN = 4 CREDITS		ON	OFF	ON				
	1 COIN = 5 CREDITS		OFF	ON	ON				
	1 COIN = 6 CREDITS		ON	ON	ON				
Coin 2	1 COIN = 1 CREDIT					OFF*	OFF*	OFF*	
	2 COINS = 1 CREDIT					ON	OFF	OFF	
	3 COINS = 1 CREDIT					OFF	ON	OFF	
	1 COIN = 2 CREDITS					ON	ON	OFF	
	1 COIN = 3 CREDITS					OFF	OFF	ON	
	1 COIN = 4 CREDITS					ON	OFF	ON	
	1 COIN = 5 CREDITS					OFF	ON	ON	
	1 COIN = 6 CREDITS					ON	ON	ON	
Continue Coin	NORMAL mode START = 1 COIN CONTINUE = 1 COIN								OFF*
	CONTINUE mode START = 2 COINS CONTINUE = 1 COIN								ON


- Coin Slot が SAME の時は、CREDIT の表示が 1 つで 1P/2P 共通です。
 ● Coin Slot が INDIVIDUAL の時は、CREDIT の表示が 2 つで 1P/2P 毎々のコインシューターを待つことになります。
 この時は Coin 1 の設定が Coin 1 と Coin 2 の両方に影響します。
 ● Continue Coin が CONTINUE mode の時は DIP [2] - [7] の設定が無効されます。
 ● [1] - [8] が全て ON の時は、FREE PLAY mode になります。このモードの時はコインの入力を一切見ません。

- When there is a common coin slot, 1 or 2 players may play with the same CREDIT display.
 ● When the coin slot is set on INDIVIDUAL, each player will have an individual coin slot with a 2 CREDIT display.
 In this case, the setting of Coin slot 1 affects Coin slot 2.
 ● When the machine is in the CONTINUE mode, the setting of Dip [2] - [7] will be ignored.
 ● When the machine settings [1] - [8] are all ON, it will be in the FREE PLAY mode. In this mode, there is no need to use coins.

DIP SWITCH [2]

Screen	NORMAL REVERSE	1	2	3	4	5	6	7	8
		OFF*							
Demo Sound	OFF		OFF						
	ON		ON*						
Difficulty	NORMAL			OFF*	OFF*				
	EASY			ON	OFF				
	DIFFICULT			OFF	ON				
	MORE DIFFICULT			ON	ON				
Number of Fighters	3					OFF*	OFF*		
	1					ON	OFF		
	2					OFF	ON		
	4					ON	ON		
Extend Fighters	600,000 points							OFF*	
	800,000 points							ON	
Test Mode	OFF								OFF*
	ON								ON

- Demo Sound が OFF の時は、コイン投入時の音も聞かれません。
 ● * は出荷時の初期設定です。
 ● When Demo Sound is OFF, there will be no sound if the machine has not been started.
 ● * marks the initial setting when shipped.

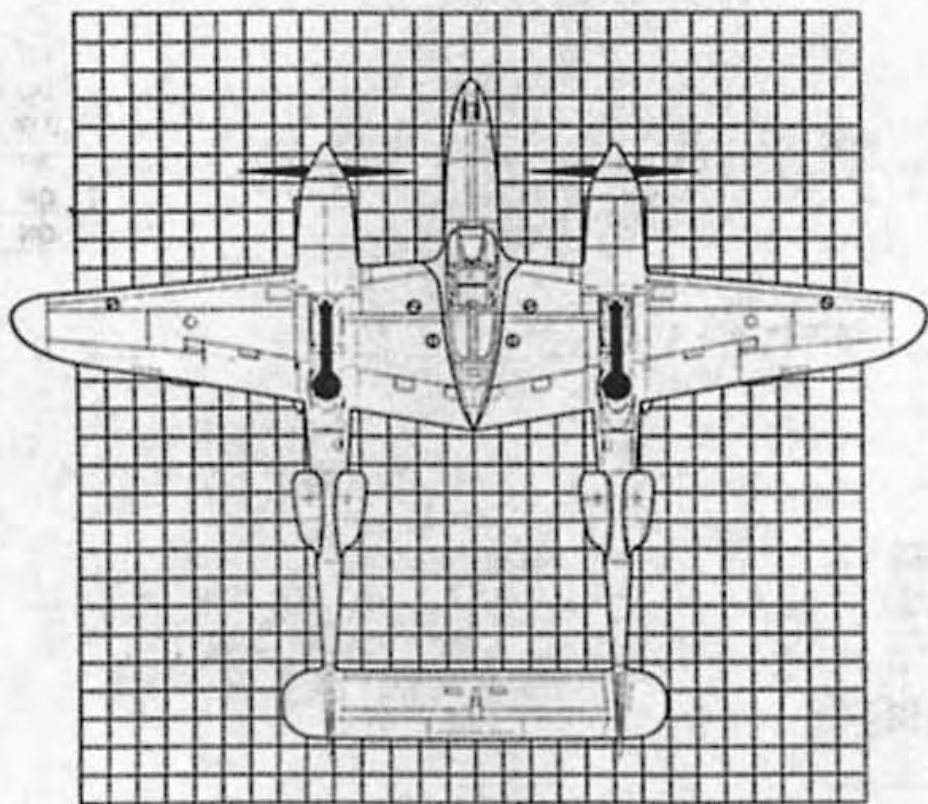

P-38 LIGHTNING

CREW : 1 LENGTH : 11.53M

WINGSPAN : 15.85M

MAX OUT PUT : 1600HP/3100RPM × 2

MAX SPEED : 666KM/H/7620M

WEIGHT : 7425KG