ハーネスの結線

コネクター1 (CONNECTOR1)

	部品側 COMPONENT SIDE		半田側 SOLDER SIDE
1A	+5 (V)	1B	+5 (V)
2A	+5 (V)	2B	+5 (V)
3A	1P UP	3B	2P DOWN
4A	1P DOWN	4B	2P RIGHT
5A	1P RIGHT	5B	2P LEFT
6A	1P LEFT	6B	2P A SW
7A	1P A SW	7B	
8A	1P B SW	8B	
9A		9B	COIN1
10A	1P START	10B	COIN2
11A	2P UP	11B	2P B SW
12A	GREEN	12B	
13A	BLUE	13B	2P START
14A	RED	14B	
15A	SYNC	15B	
16A	GND	16B	GND
17A	GND	17B	GND
18A	GND	18B	GND

コネクター2 (CONNECTOR2)

	部品側 COMPONENT SIDE		半田側 SOLDER SIDE
1A	+12 (V)	1B	+12 (V)
		2B	
3A	+5 (V)	3B	+5 (V)
4A	SPEAKER(+)	4B	
5A	GND.SPEAKER(-)	5B	GND
6A	GND	6B	GND

操作 (OPERATIONS)

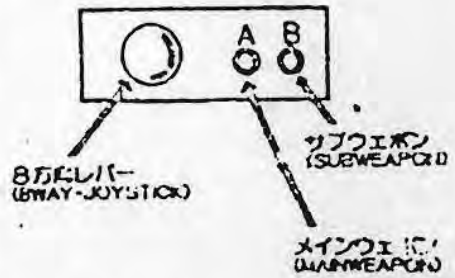

ボード (BOARD)

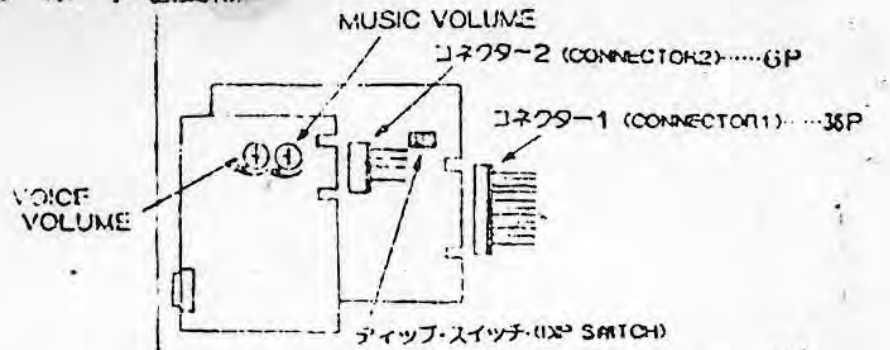

ディップスイッチの設定 (DIP SWITCH SETTINGS)

		1	2	3	4	5	6	7	8
DEMO VOICE	□ (NO)	OFF							
	■ (YES)	ON							
COIN1	1COIN 1PLAY		OFF	OFF	OFF				
	1COIN 2PLAY		ON	OFF	OFF				
	1COIN 3PLAY		OFF	ON	OFF				
	1COIN 4PLAY		ON	ON	OFF				
	1COIN 5PLAY		OFF	OFF	ON				
	1COIN 6PLAY		ON	OFF	ON				
	2COIN 3PLAY		OFF	ON	ON				
	3COIN 2PLAY		ON	ON	ON				
COIN2	1COIN 1PLAY		OFF	OFF	OFF				
	2COIN 1PLAY		ON	OFF	OFF				
	3COIN 1PLAY		OFF	ON	OFF				
	4COIN 1PLAY		ON	ON	OFF				
	5COIN 1PLAY		OFF	OFF	ON				
	6COIN 1PLAY		ON	OFF	ON				
	7COIN 1PLAY		OFF	ON	ON				
	8COIN 1PLAY		ON	ON	ON				
PLAY回数	3					OFF	OFF		
	4					ON	OFF		
	5					OFF	ON		
	6					ON	ON		
難易度 (DIFFICULTY)	□ (EASY)							OFF	
	■ (DIFFICULT)							ON	
TYPE	UP RIGHT								OF
	TABLE								ON

[redacted]