

KO BONG ENTERPRISE CO., LTD.

Manufacturers, Exporters & Importers

C. P. O. BOX: 6439 SEOUL, KOREA.

TLX: KO BONG K33806

FAX: 02) 715-0990

TEL: OVERS DEPT. 02) 719-0111

Oscar

REF. NO. KBF 881123

DATE : NOV. 23, 88

TO: G & P

KO BONG ENT.

ATTN: MR. HELMUT ASTHEIMER

SENDER:

PAGE : 1/1

1. RE SOUND PROBLEM OF P-47


OUR SOUND IS DIFFERENT FROM ORIGINAL AND OTHER COPIED BOARD.
BICOZ SOME OF SOUND I.C. HAS BEEN PROGRAMMED SHORTLY.
ACCORDINGLY WE HV NO WAY TO REPAIR IT.
PLS UNDERSTAND IT AND ACCEPT OUR QUALITY.

2. RE OSCAR

HEREWITH WE ARE SENDING YOU OUR LAY-OUT, PLS REFER TO IT.
PLS TRY TO DO AS OUR INSTRUCTION.

- 1) PLS TRY TO PUT TWO RESISTER ON BELOW INDICATED PLACE.
- 2) TRY TO PUT ON CAPACITOR AS BELOW

SURELY YOU CUD REPAIR IT IF U TRY TO DO AS BELOW INDICATED.

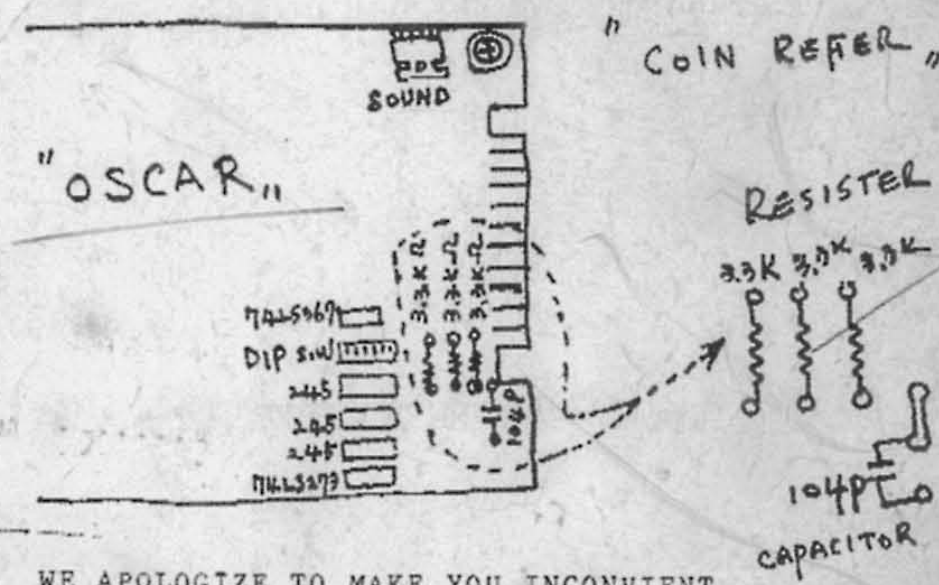


BEST RGDS,
B. H. KO

P.S. WE APOLOGIZE TO MAKE YOU INCONVIENT.

OSCAR

SOLDER SIDE

ARTS SIDE

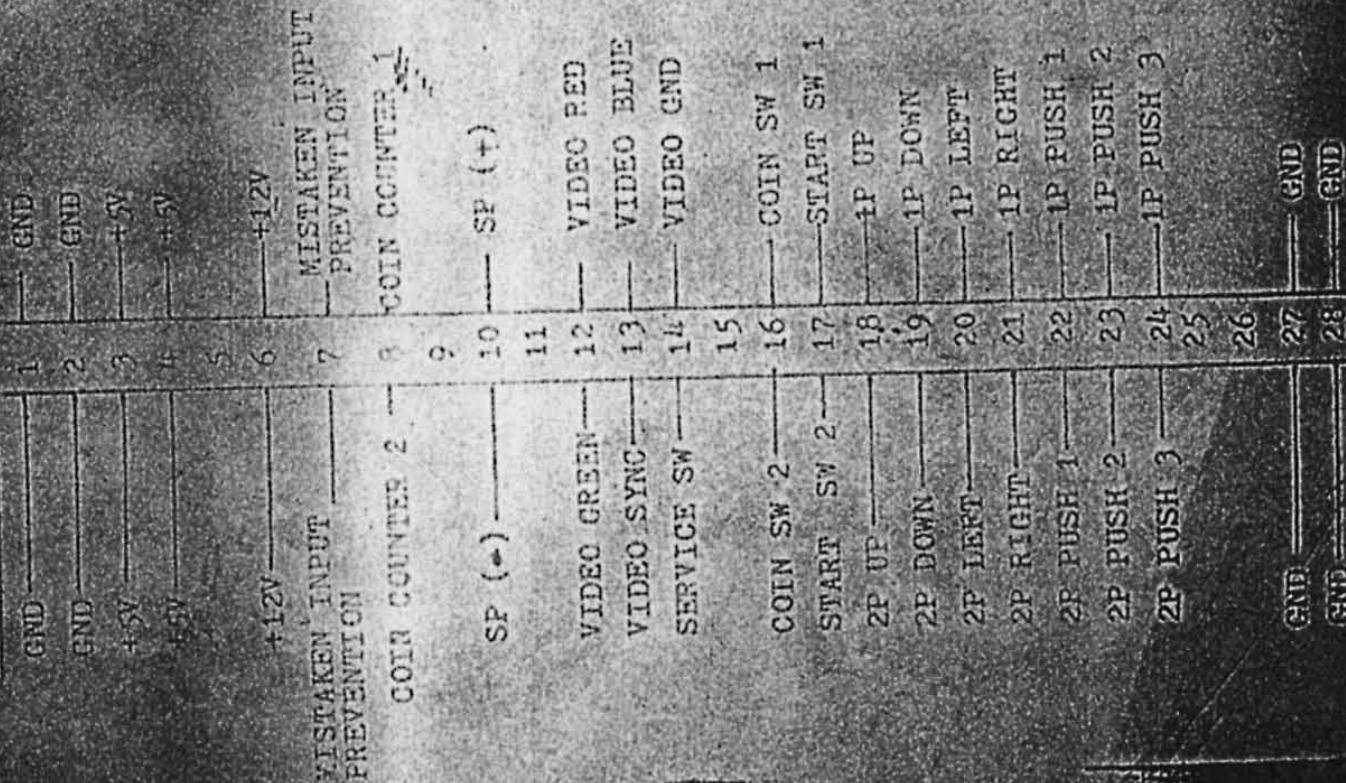

OSCAR

DIP 1

REMARKS

SETTING

NO

NO	SETTING	REMARKS
1	OFF ON	COIN/CREDIT RIGHT SELECTOR
2	OFF ON	COIN/CREDIT LEFT SELECTOR
3	1 COIN 1	DIP SW 2
4	1 PLAY 2	
5	OFF ON	DON'T CHANGE
6	OFF ON	ATTRACT NOISE SOUND
7	OFF ON	SCREEN ROTATION
8	OFF ON	CONTROL PANEL

REMARKS

SETTING

NO

NO	SETTING	REMARKS
1	OFF ON	NUMBER OF LIVES
2	OFF ON	
3	5	GAME DIFFICULTY
4	1	
5	OFF ON	EXTRA LIVES
6	OFF ON	
7	EVERY 50,000	DIP SW 2
8	EVERY 90,000 ONLY	
9	OFF ON	DON'T CHANGE
10	OFF ON	CONTINUE MODE



OSCAR

Belegung CPU-Platine

Pult: 8-Wege-Steuerschalter, m. 3 Aktionstasten und 2 Spielertasten

Pultnummer: 6096

Stromaufnahme: 5 V / 4 A - 12 V / 1 A

Original-Adapterplan

Solder Side	-----	Parts Side
GND	1	GND
GND	2	GND
+ 5 V	3	+ 5 V
+ 5 V	4	+ 5 V
----	5	----
+ 12 V	6	+ 12 V
----	7	----
Coin Counter 2	8	Coin Counter 1
----	9	----
Speaker (-)	10	Speaker (+)
----	11	----
Video Green	12	Video Red
Video Sync.	13	Video Blue
Service Switch	14	Video GND
----	15	----
Coin SW 2	16	Coin SW 1
Start SW 2	17	Start SW 1
2P Control 1 Up	18	1 P Control 1 Up
2P Control 2 Down	19	1 P Control 2 Down
2P Control 3 Left	20	1P Control 3 Left
2P Control 4 Right	21	1P Control 4 Right
2P Control 5 Push 1	22	1P Control 5 Push 1
2P Control 6 Push 2	23	1P Control 6 Push 2
2P Control 7 Push 3	24	1P Control 7 Push 3
----	25	----
----	26	----
GND	27	GND
GND	28	GND



Dip-Schalter-Stellungen

DIP SW 1

		1	2	3	4	5	6	7	8
Right Selector	1 Coin / 1 Play	* off	off						
	1 Coin / 2 Play	on	off						
	1 Coin / 3 Play	off	on						
	2 Coin / 1 Play	on	on						
Left Selector	1 Coin / 1 Play			off	off				
	1 Coin / 2 Play			on	off				
	1 Coin / 3 Play			off	on				
	2 Coin / 1 Play			on	on				
Don't Change						off			
Attract Mode Sound	Yes	*					off		
	No						on		
Screen Rotation	Normal	*						off	
	Reverse							on	
Control Panel	Table								off
	Upright	*							on

